# 3 Wiring diagrams BLR-CM

## 3.1 BLR-CM06/12R

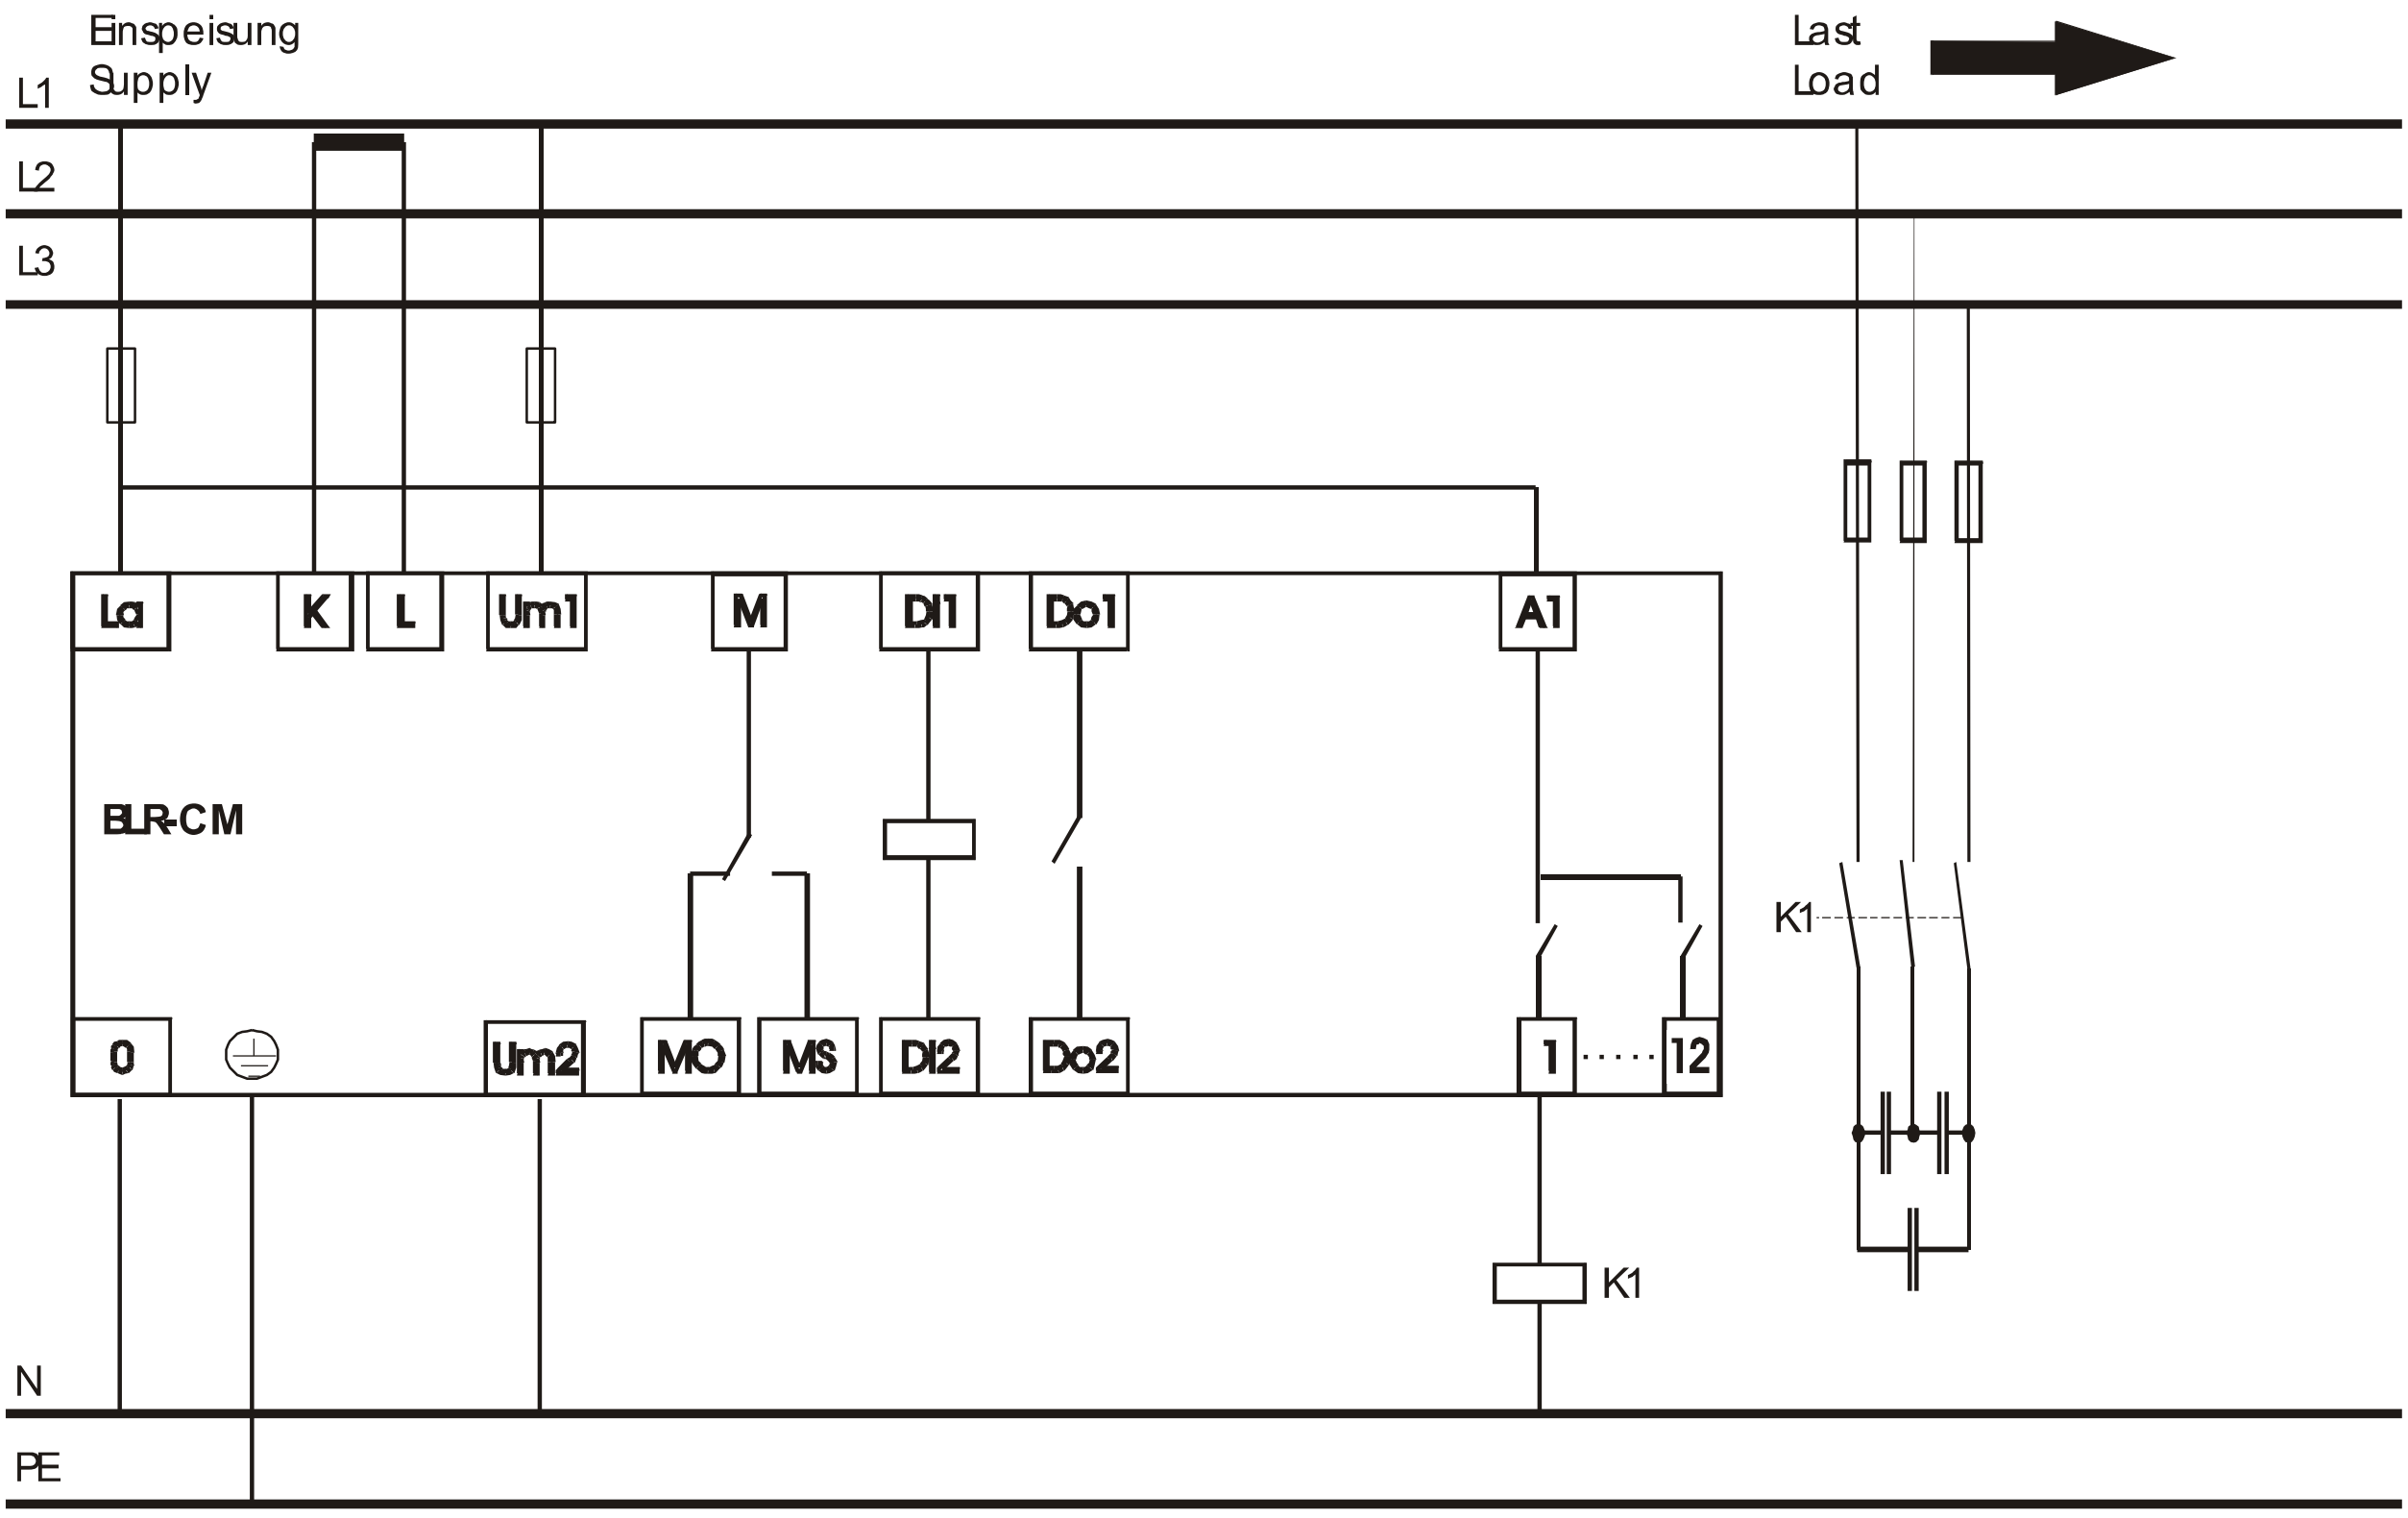


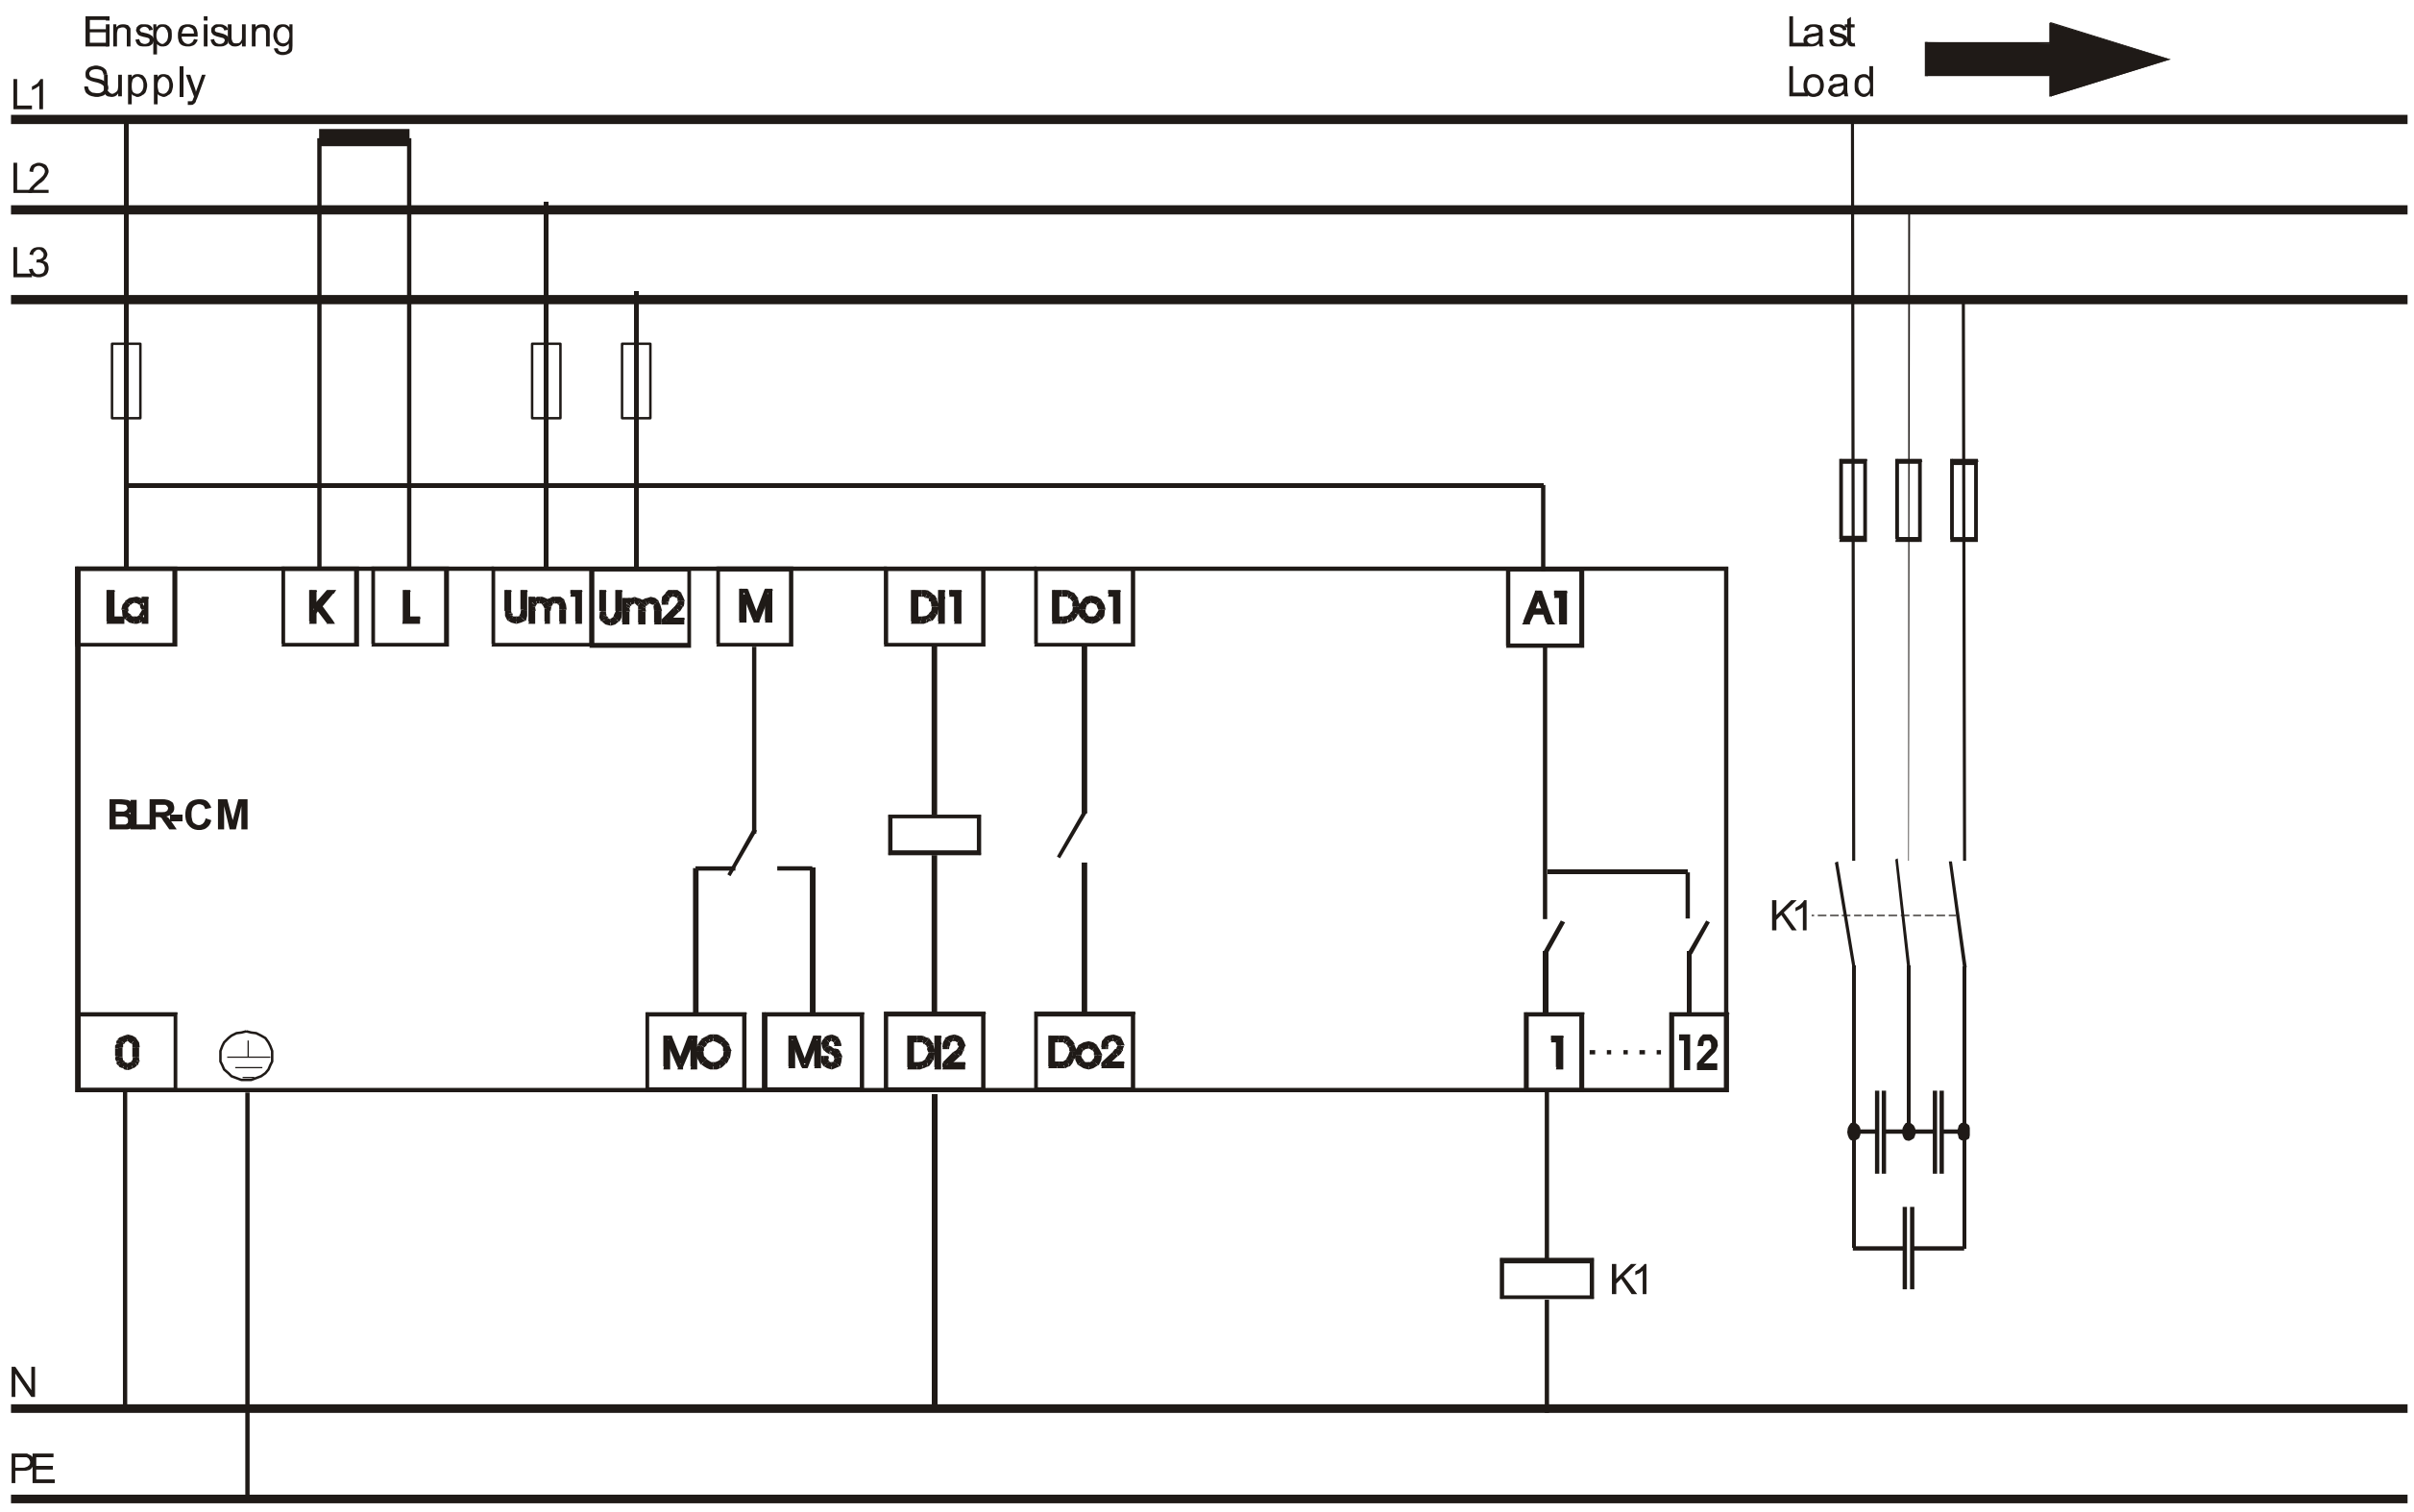

## 3.2 BLR-CM06/12T

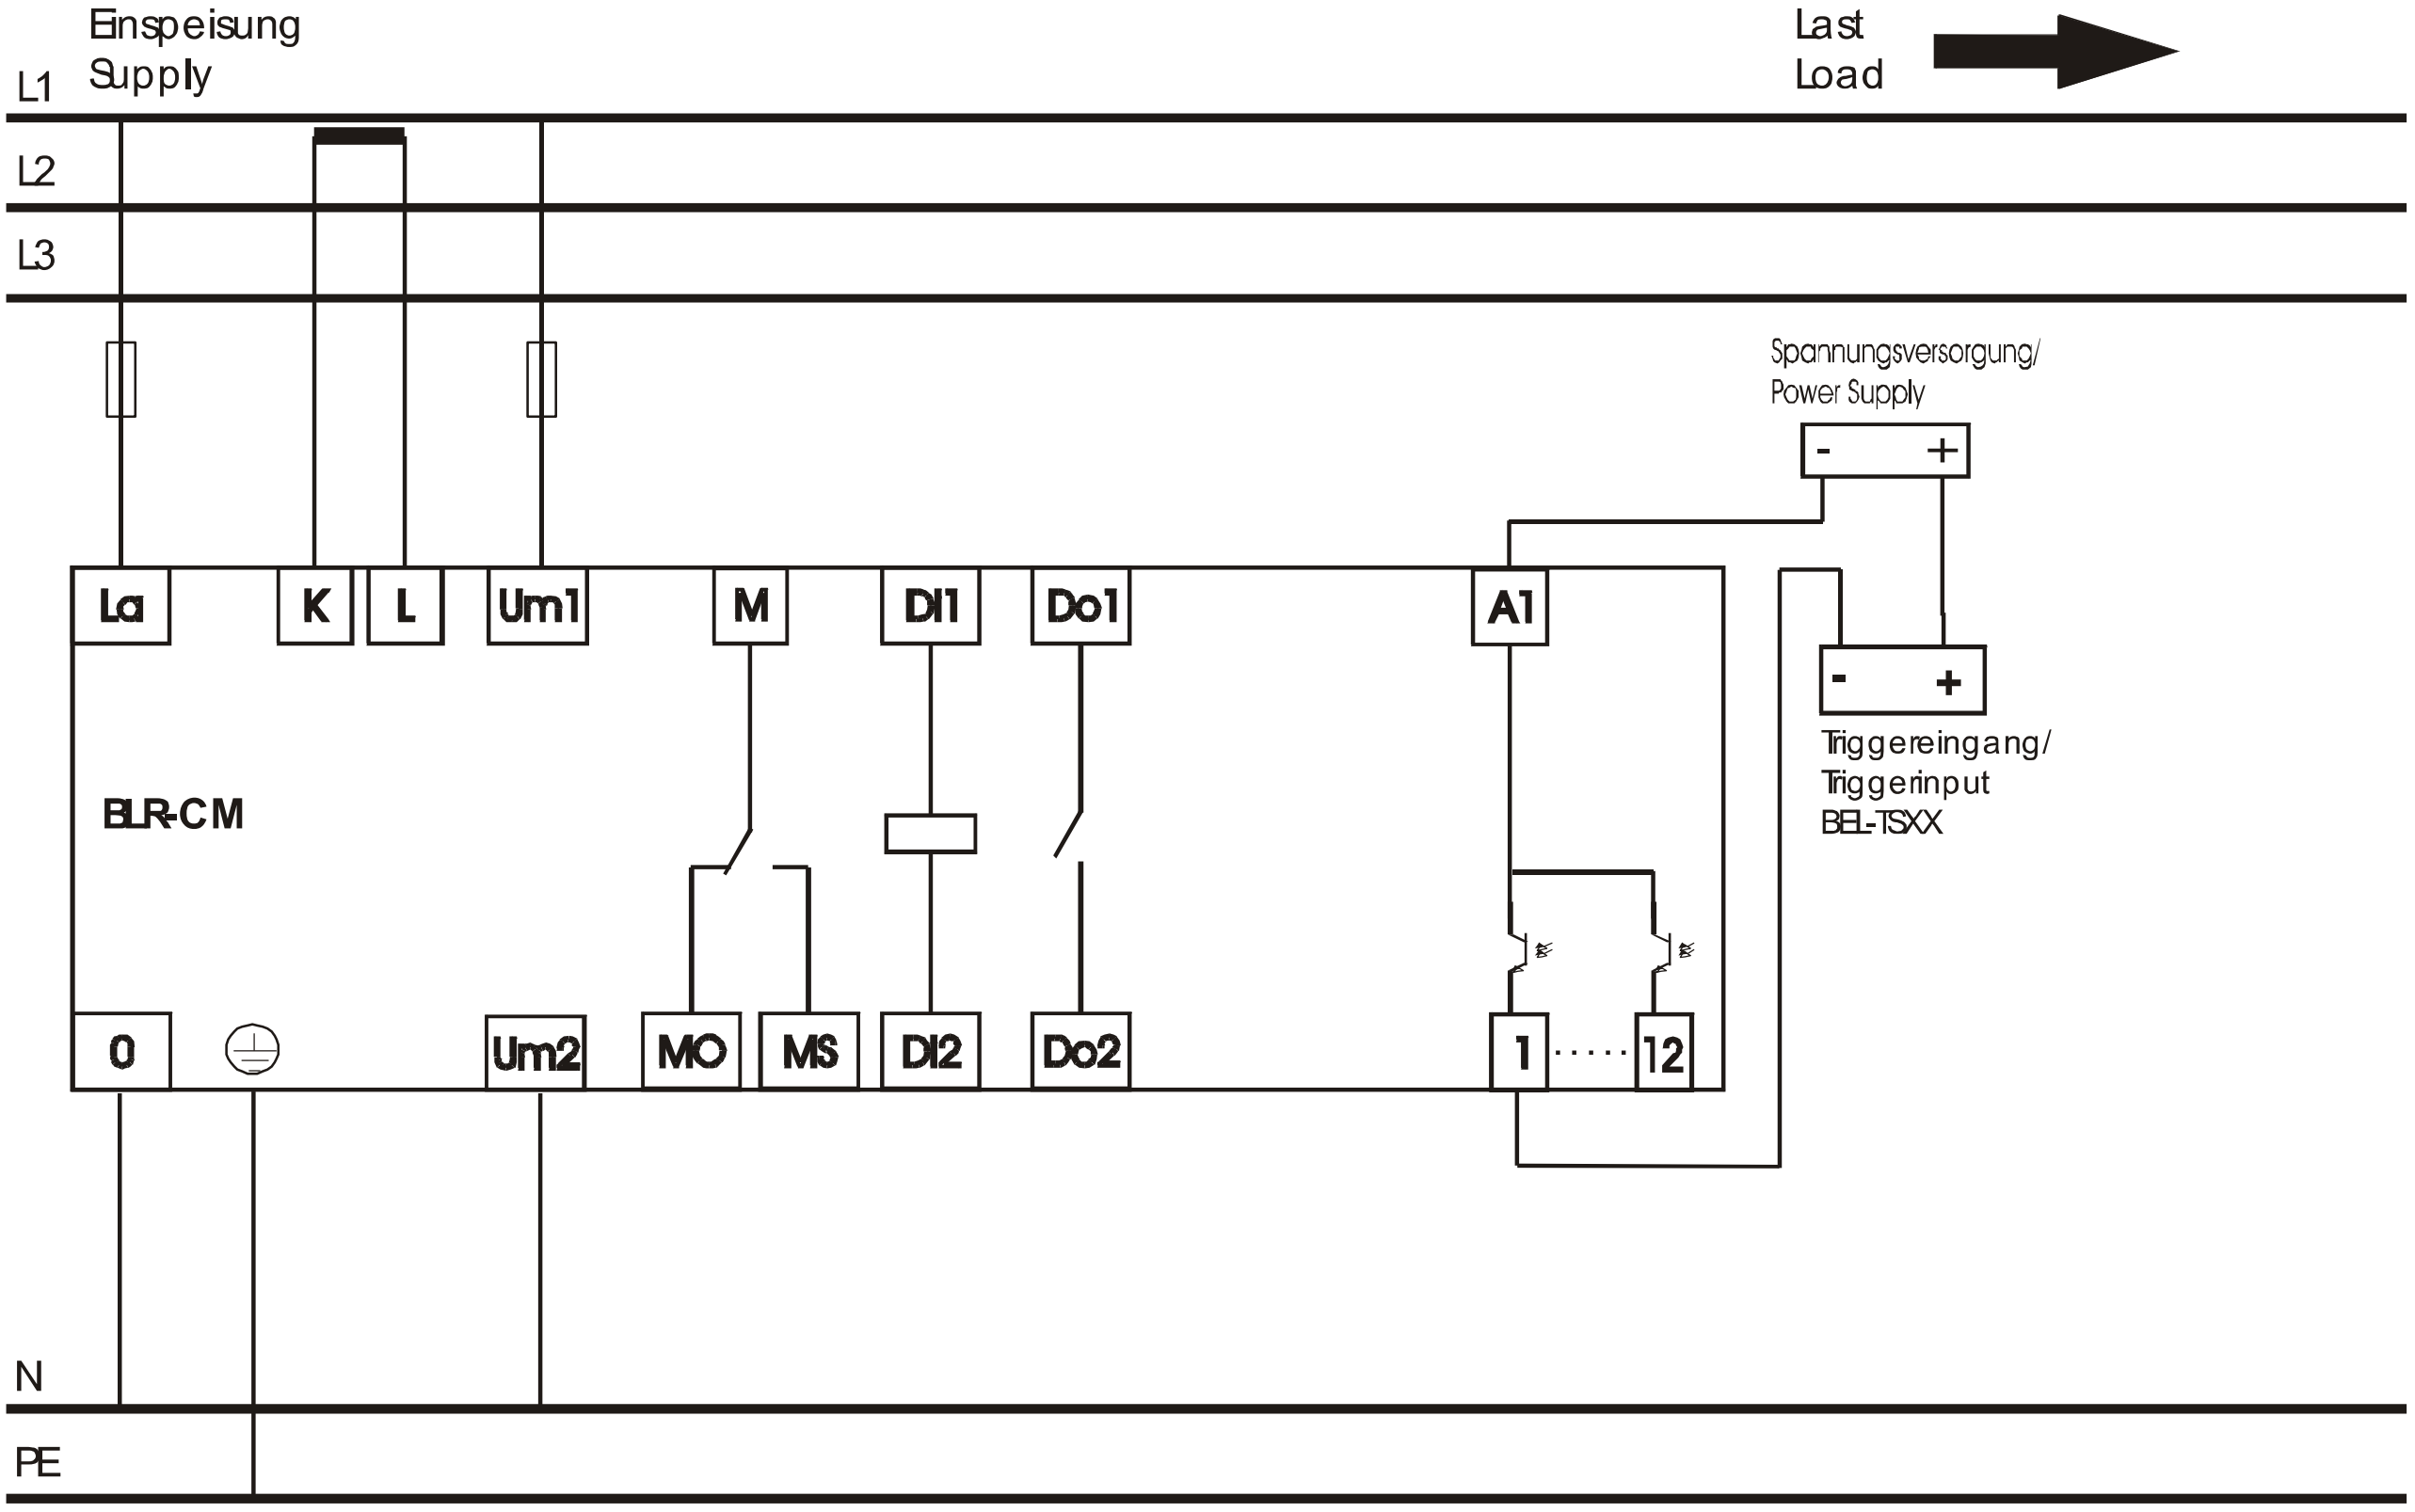


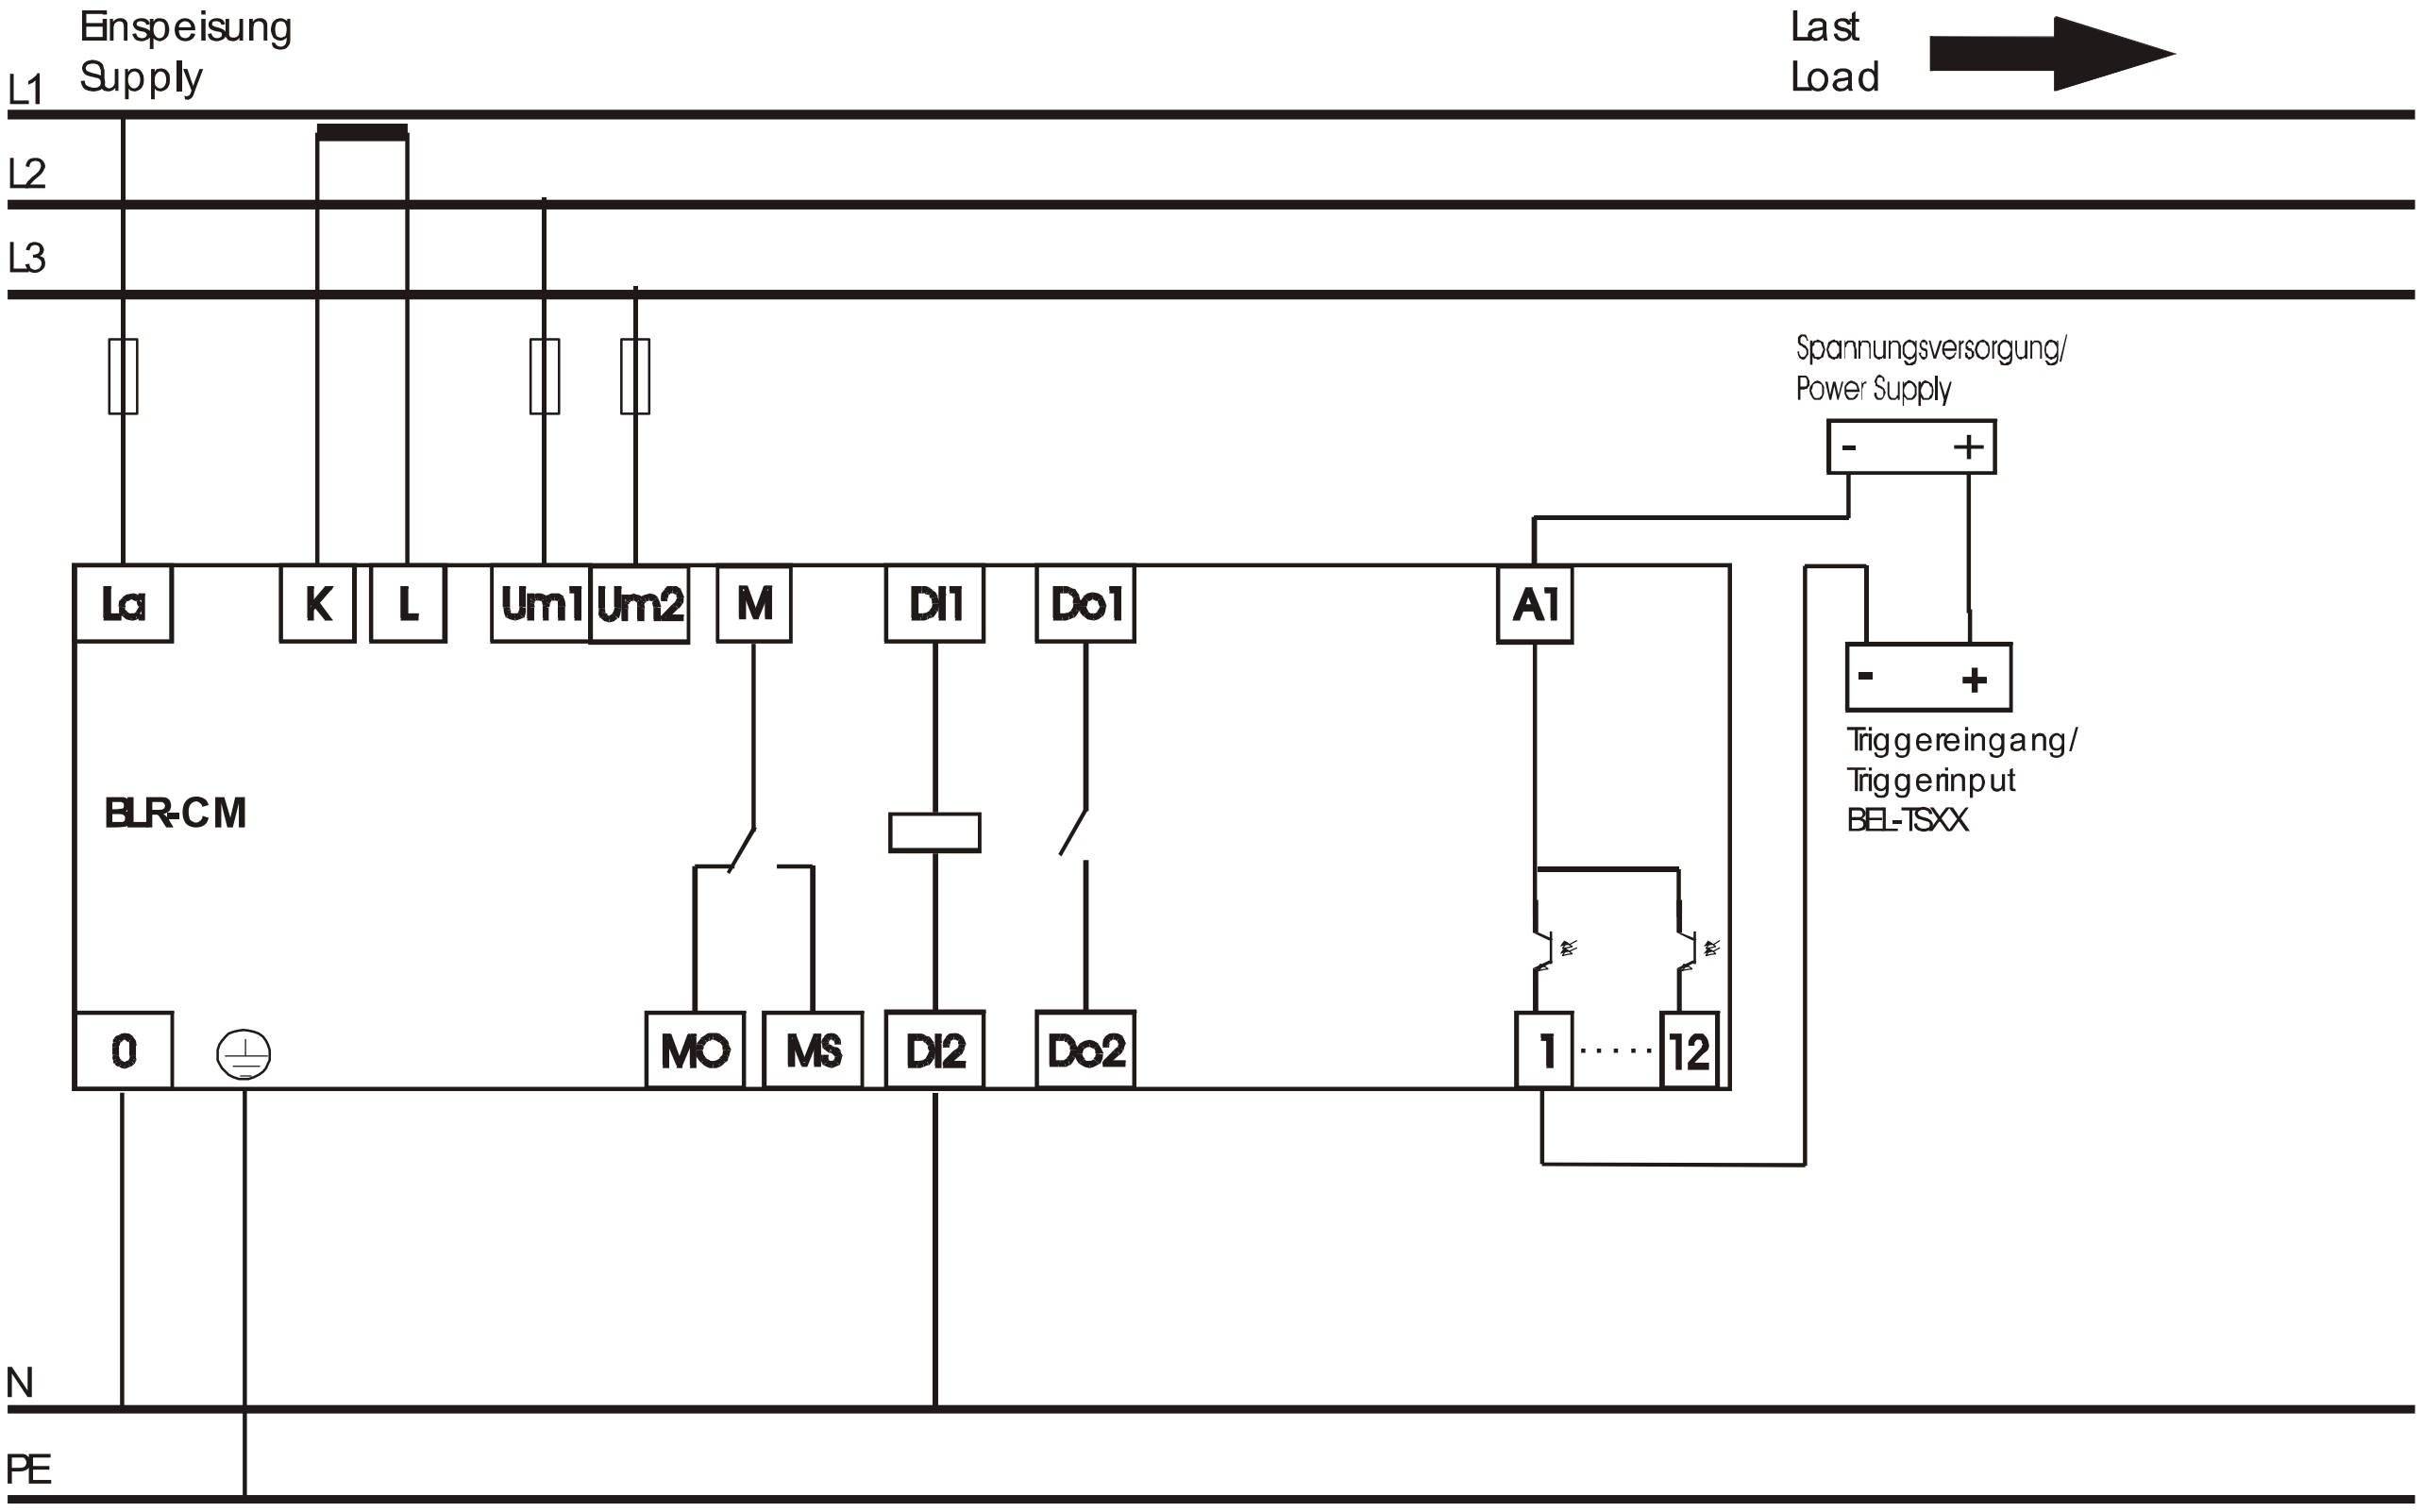

## 3.3 BLR-CM12RT

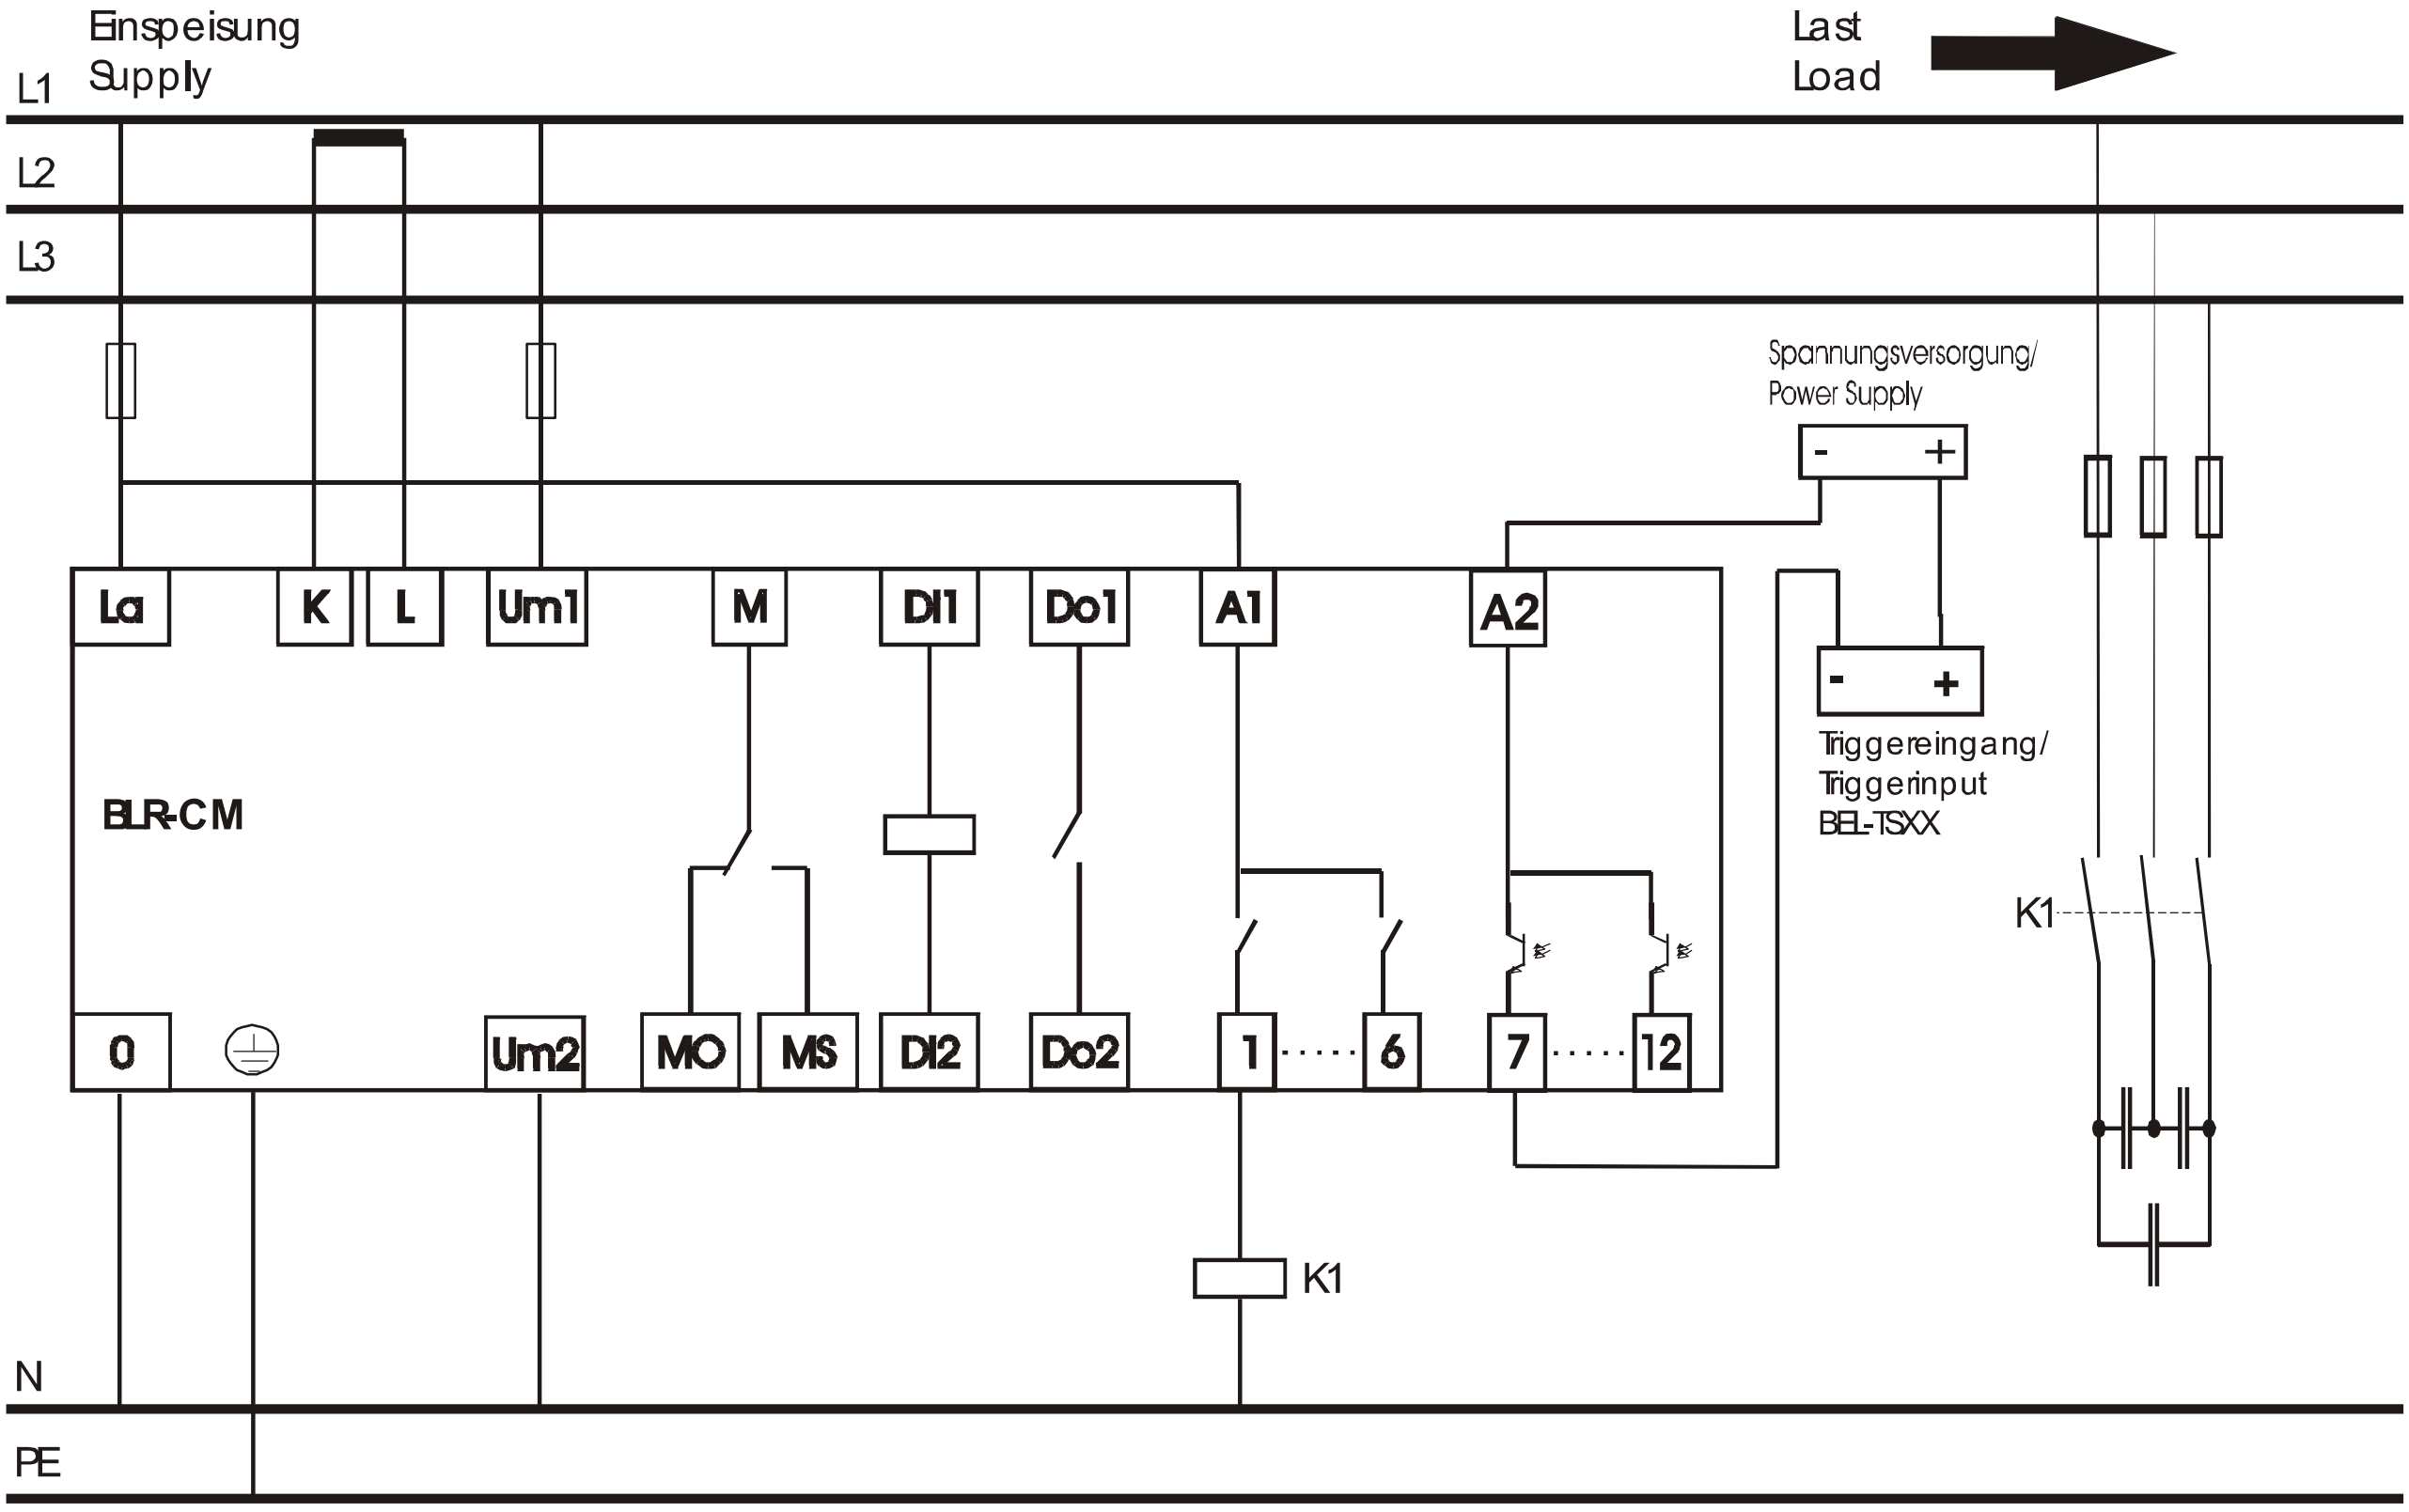


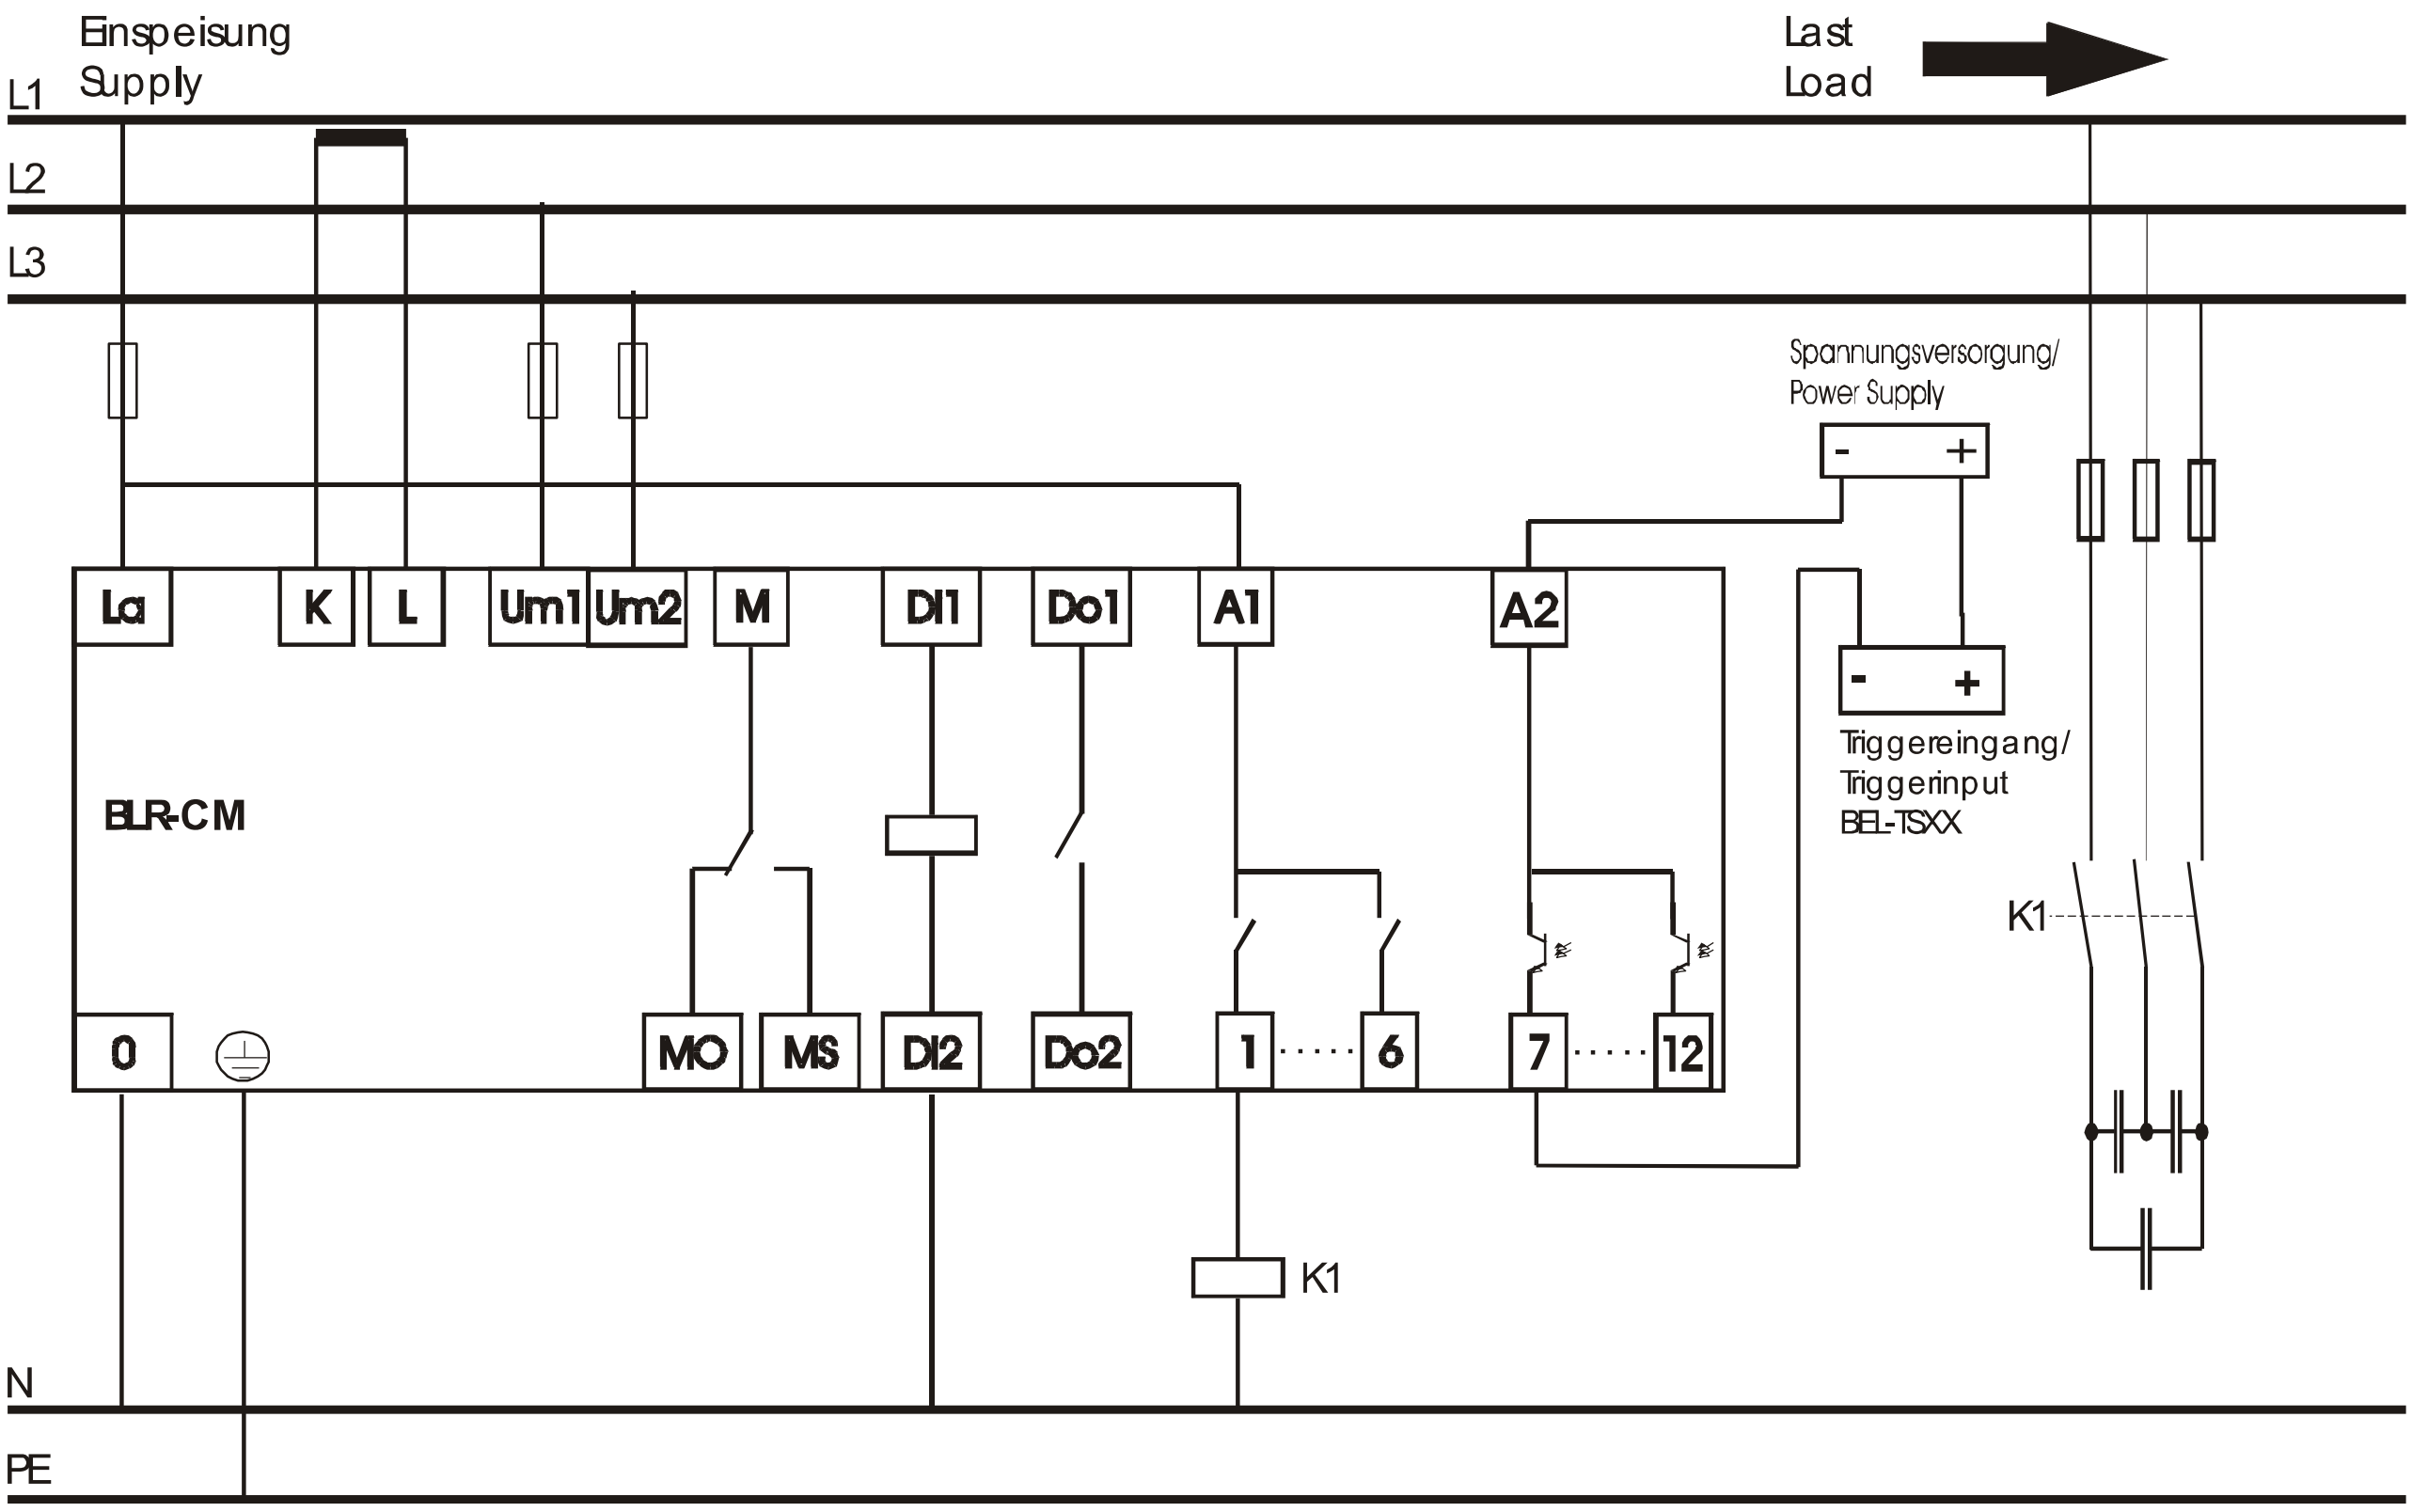

## 3.4 BLR-CM06/12R-3A (BLR-CM*3phase*)

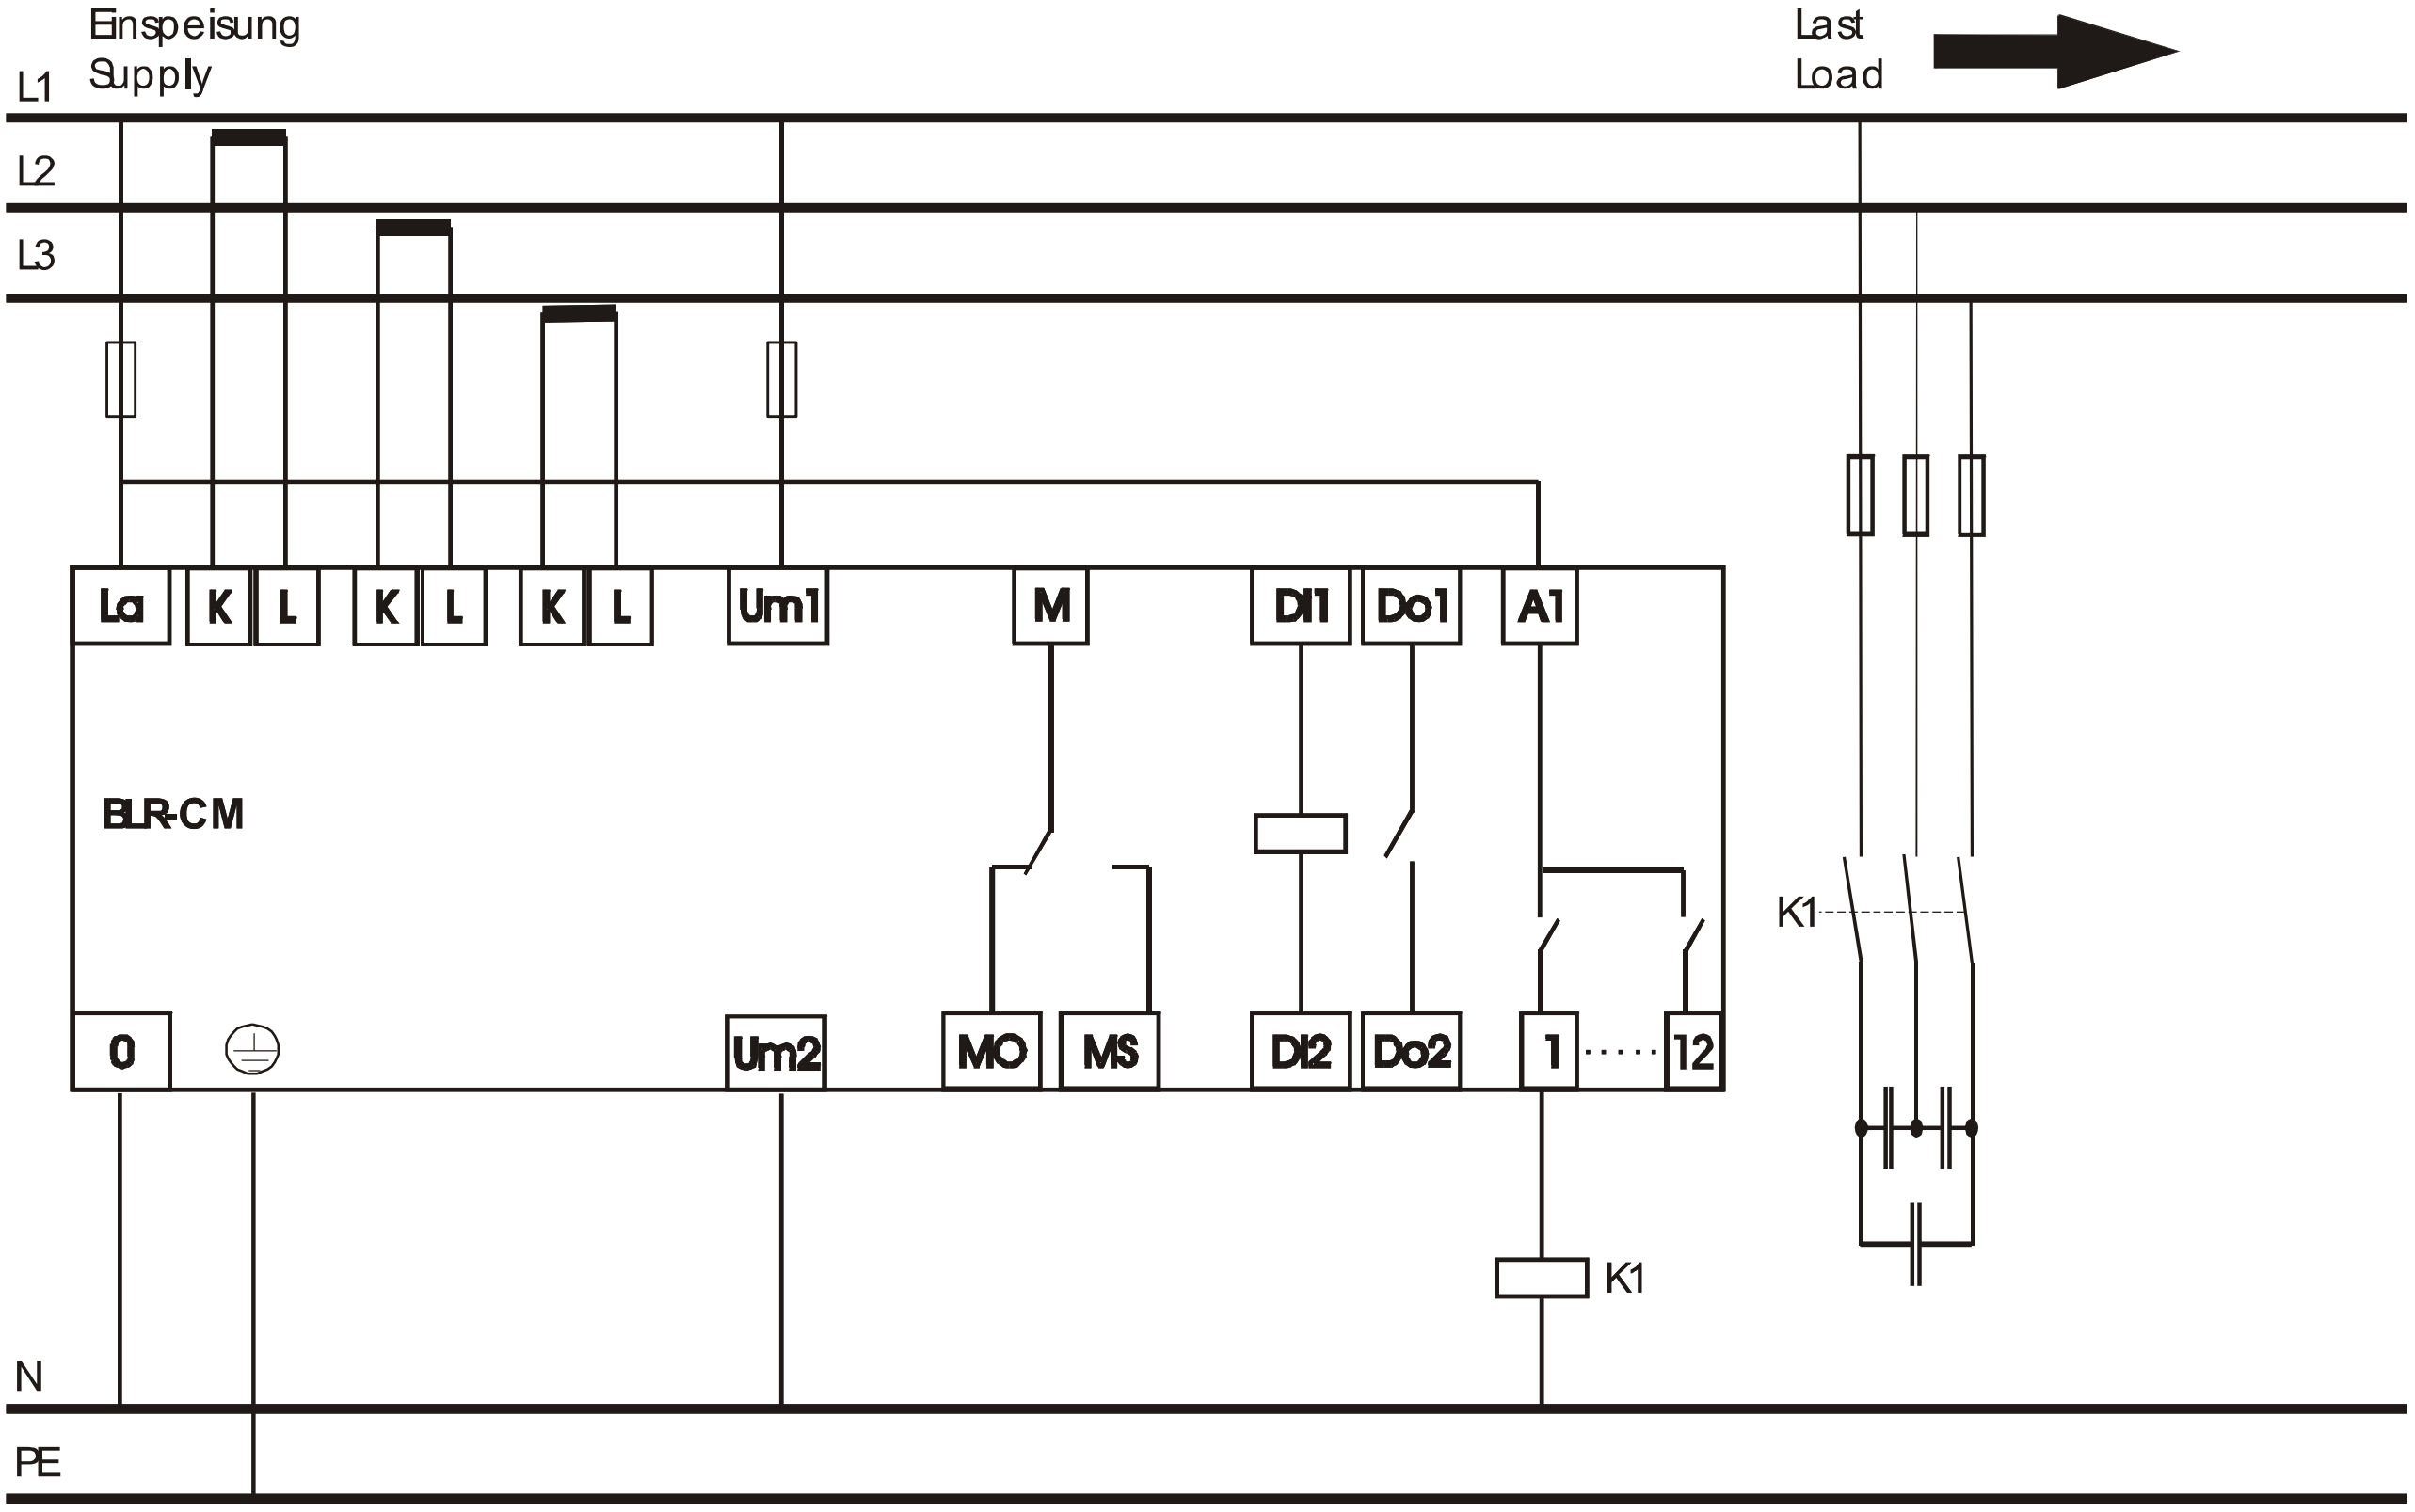


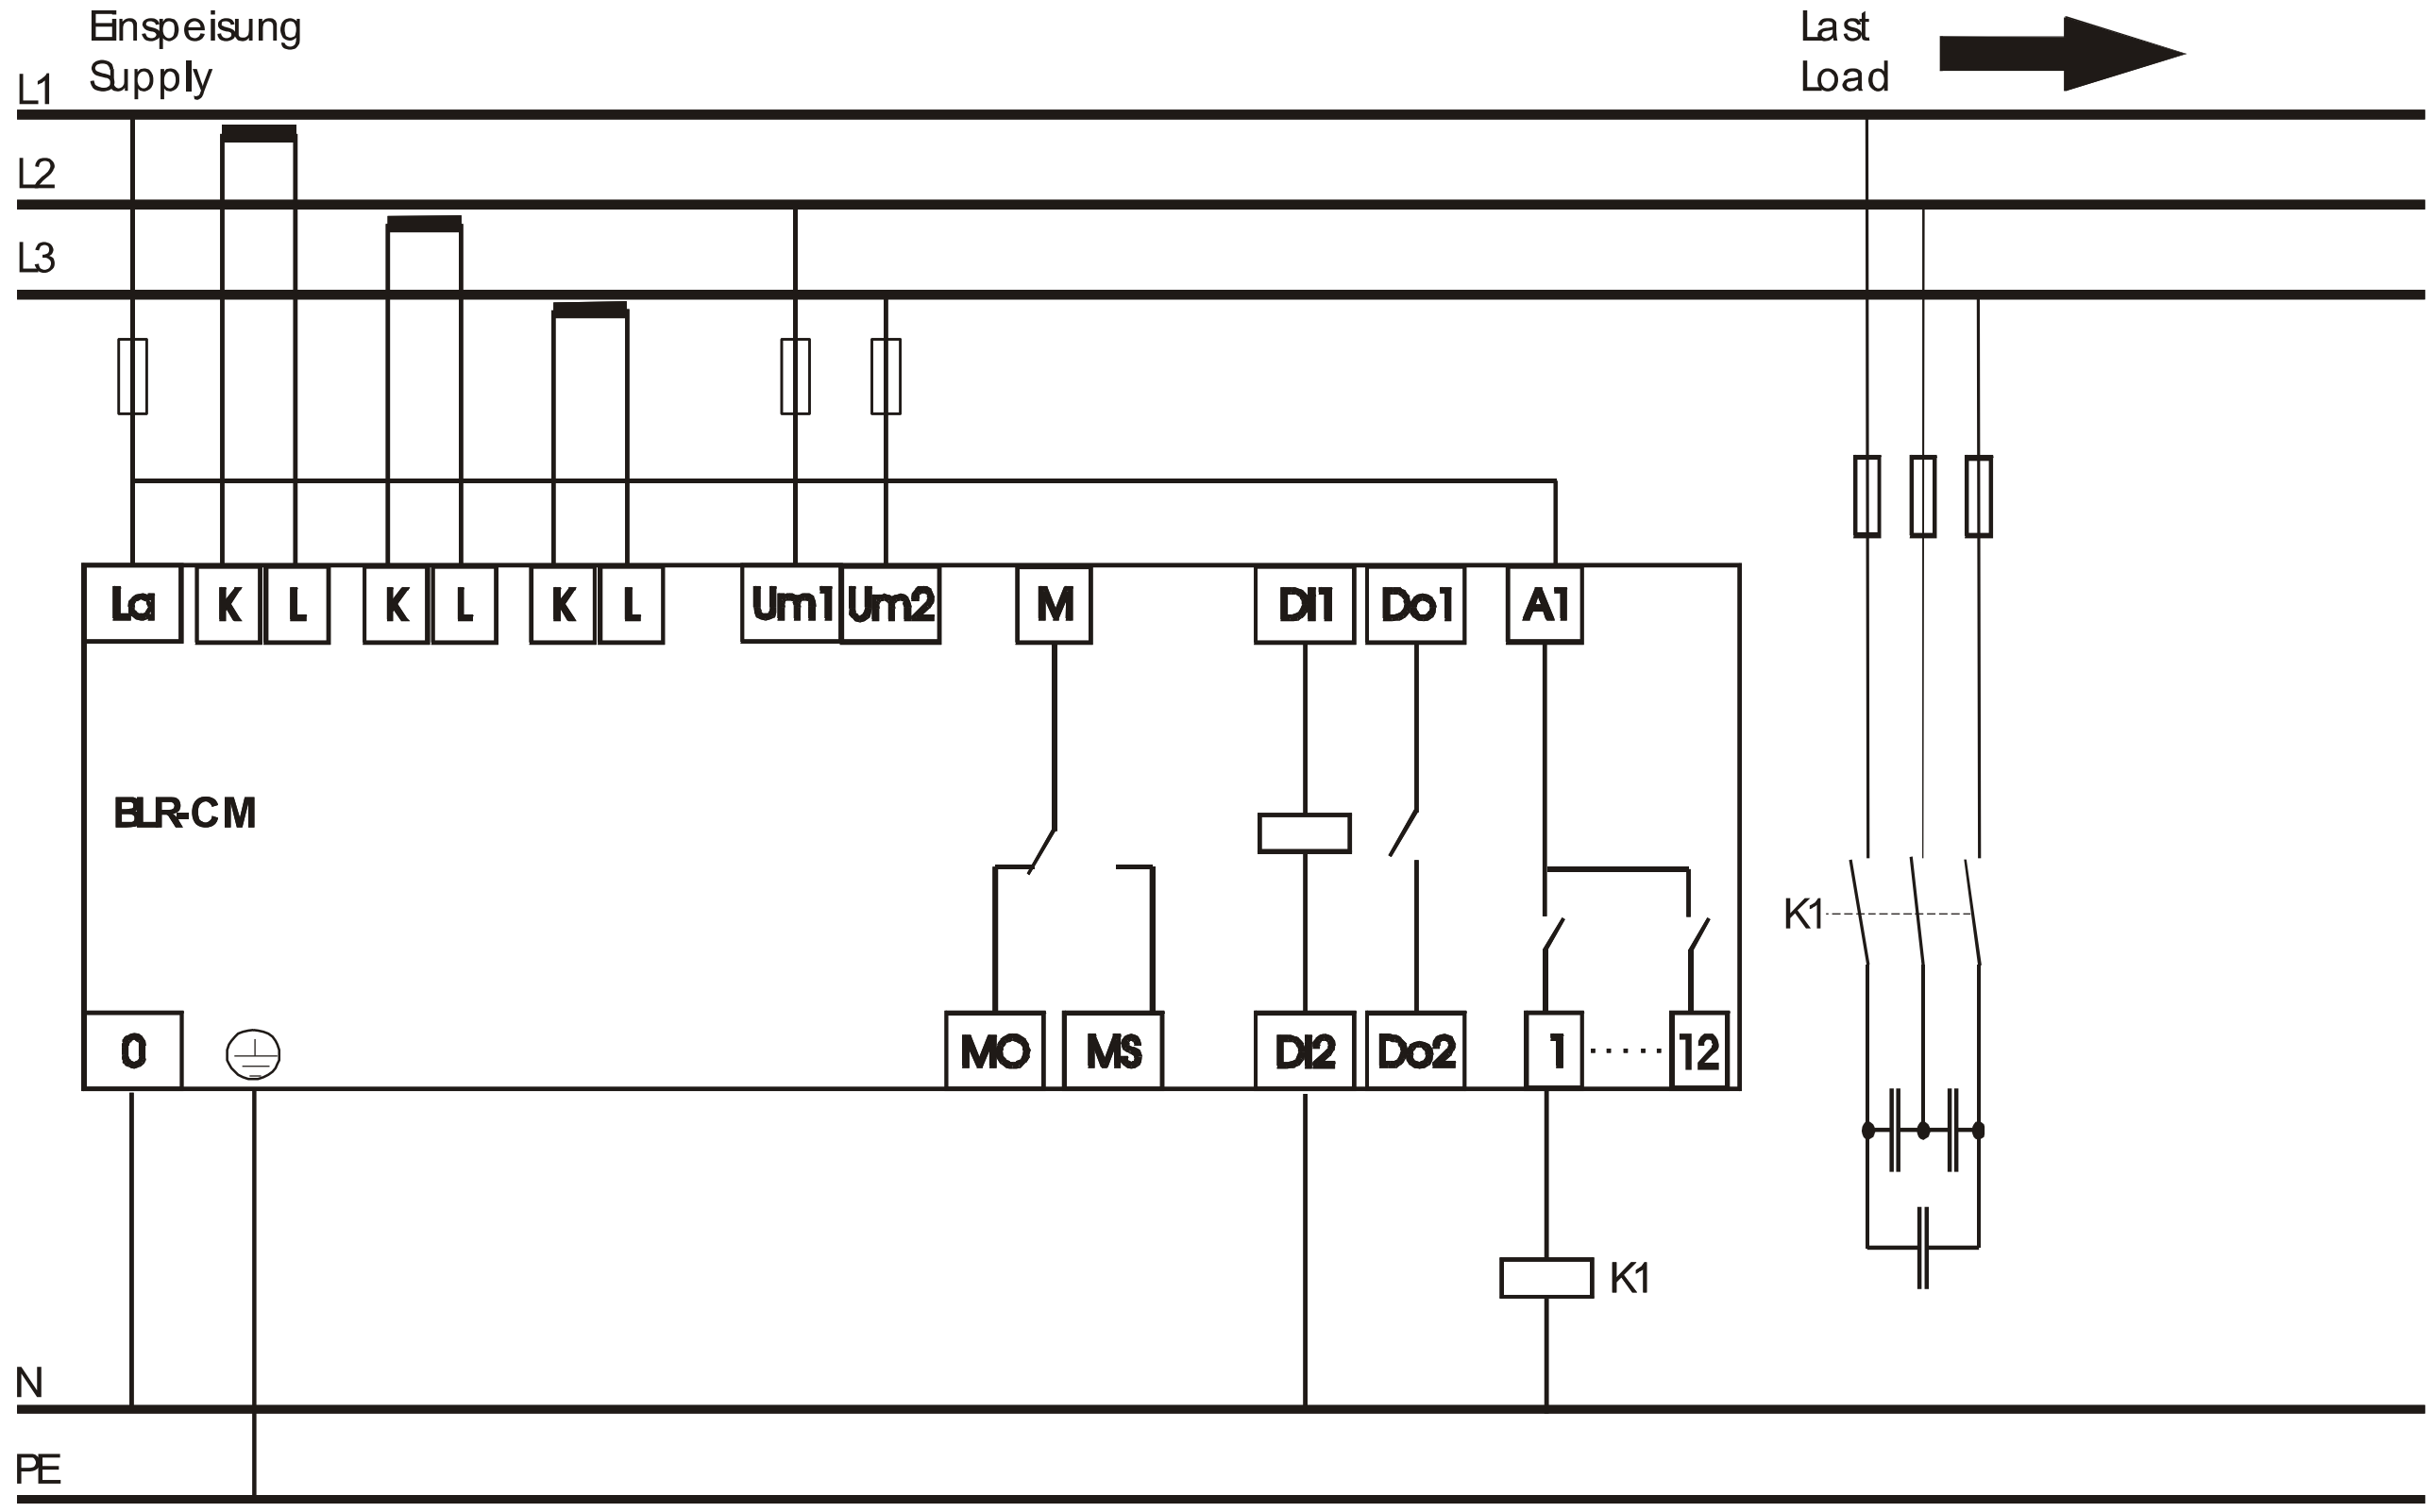

## 3.5 BLR-CM06/12T-3A (BLR-CM*3phase*)

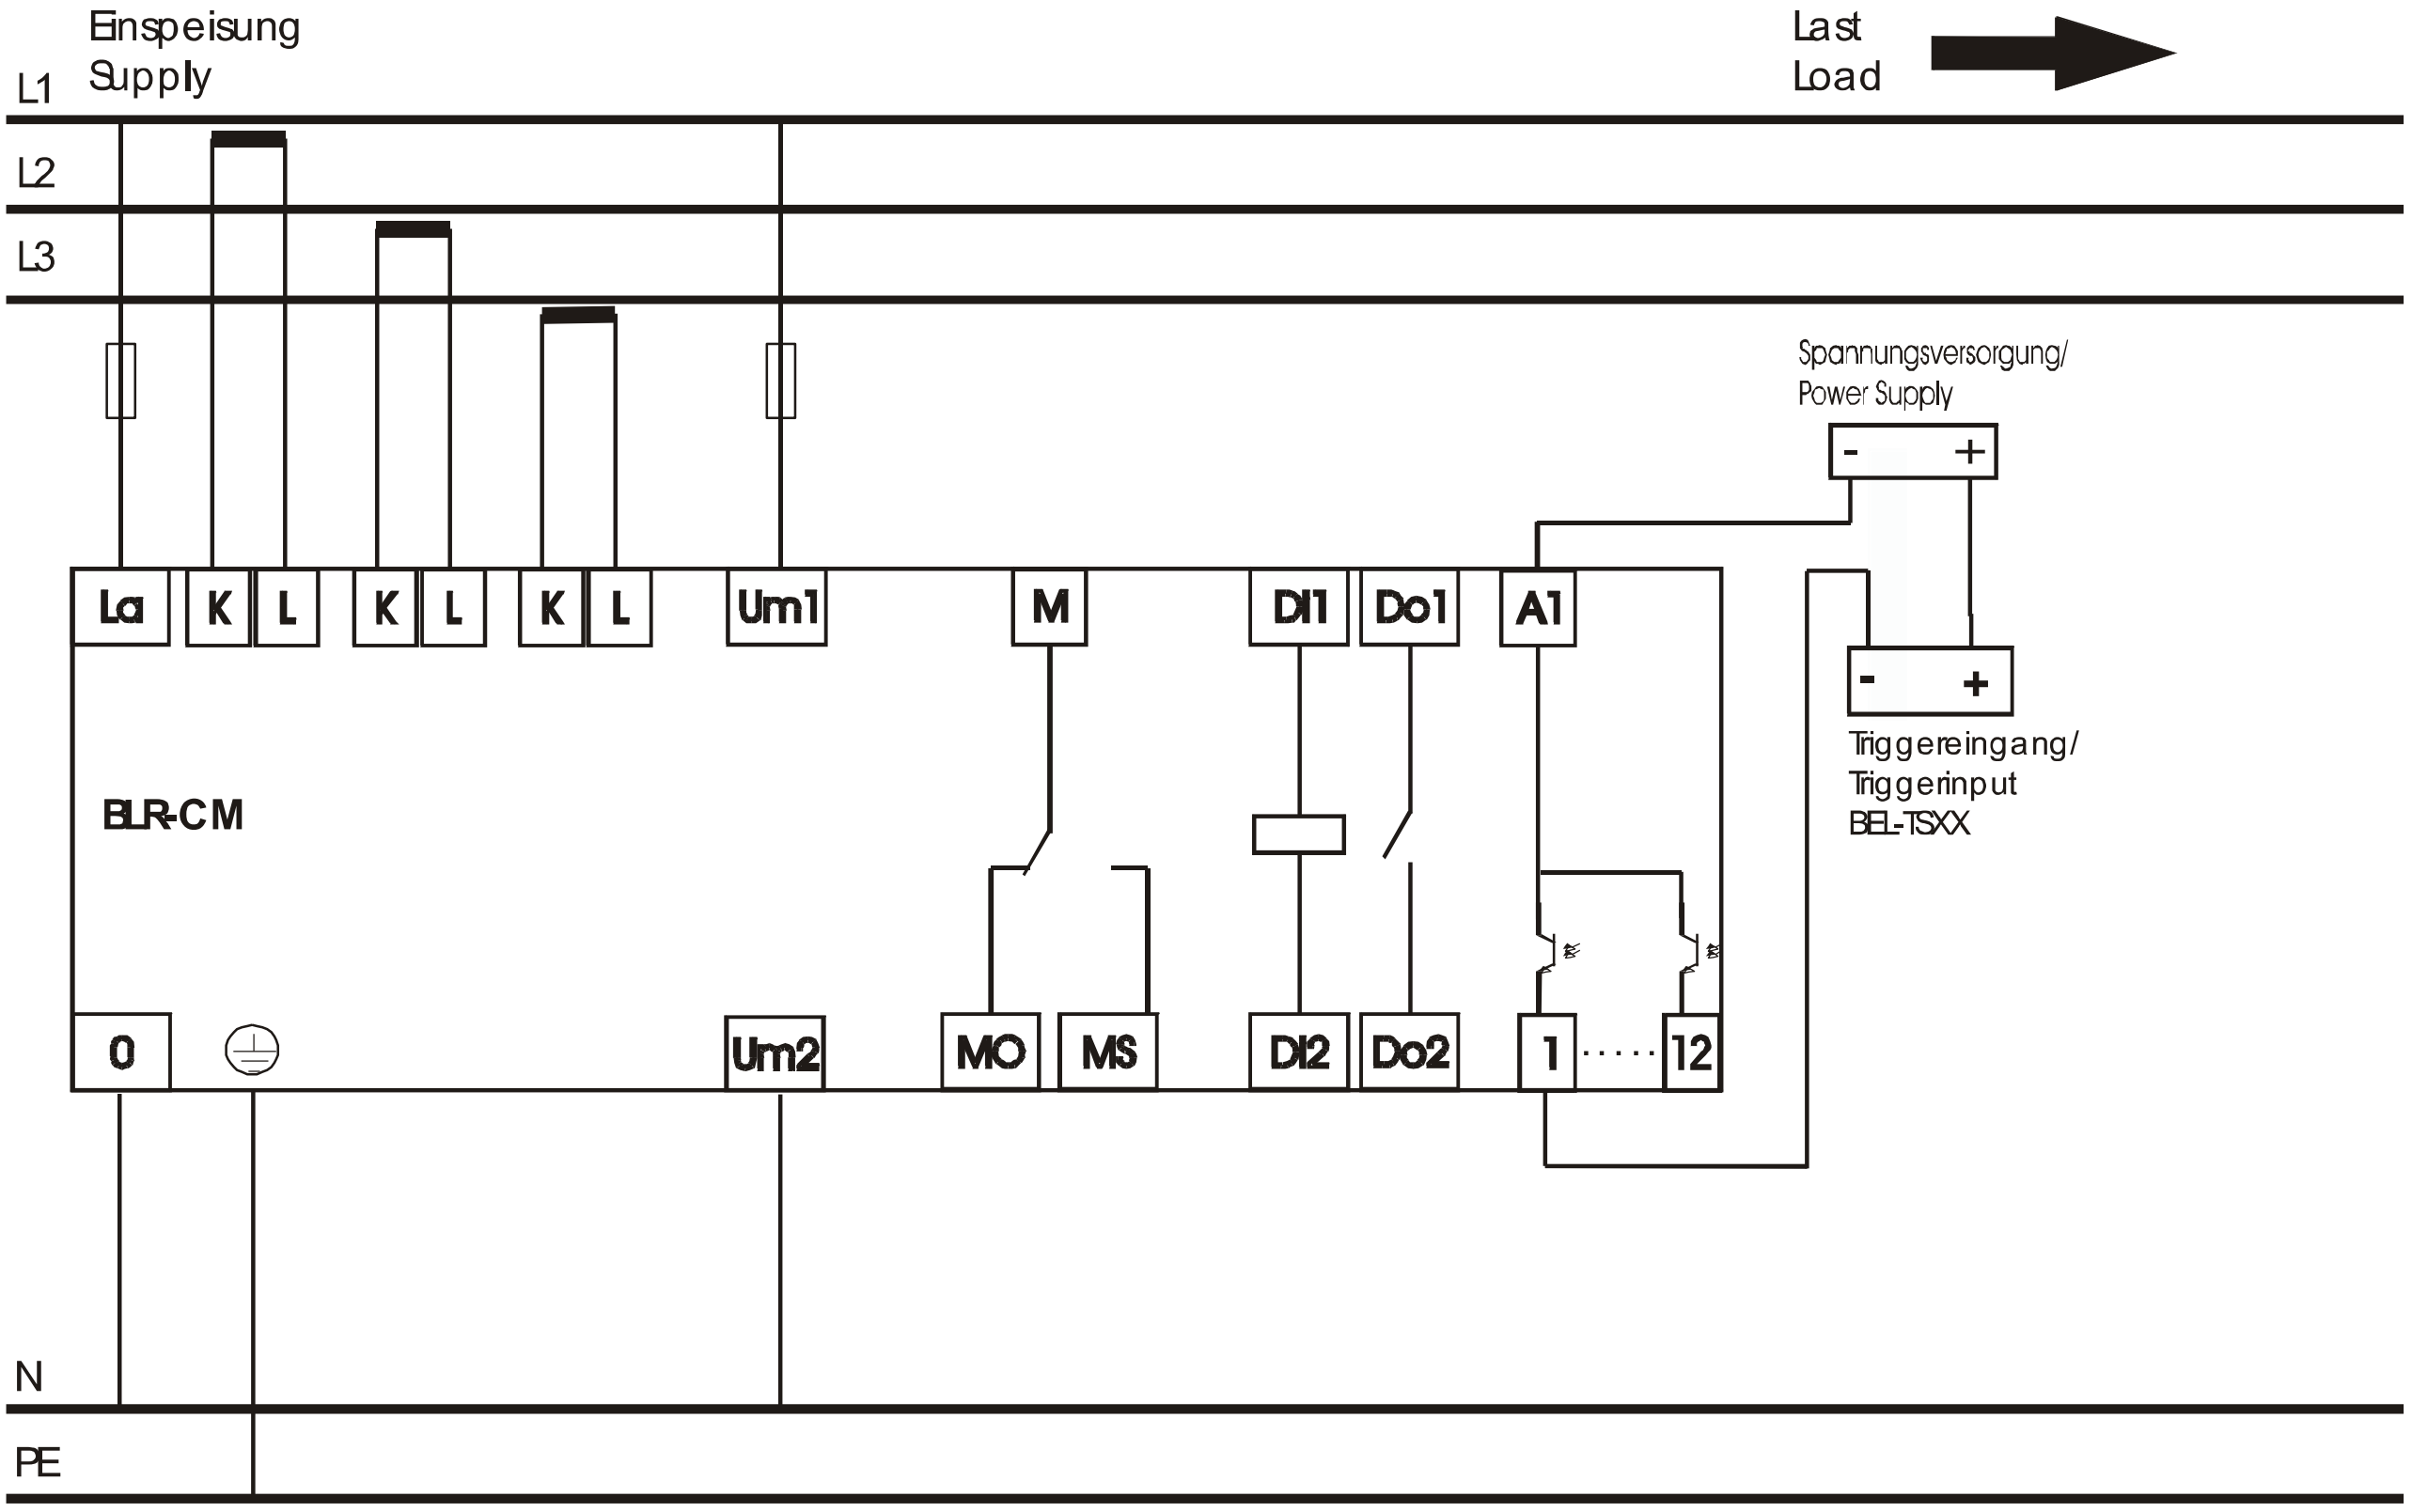


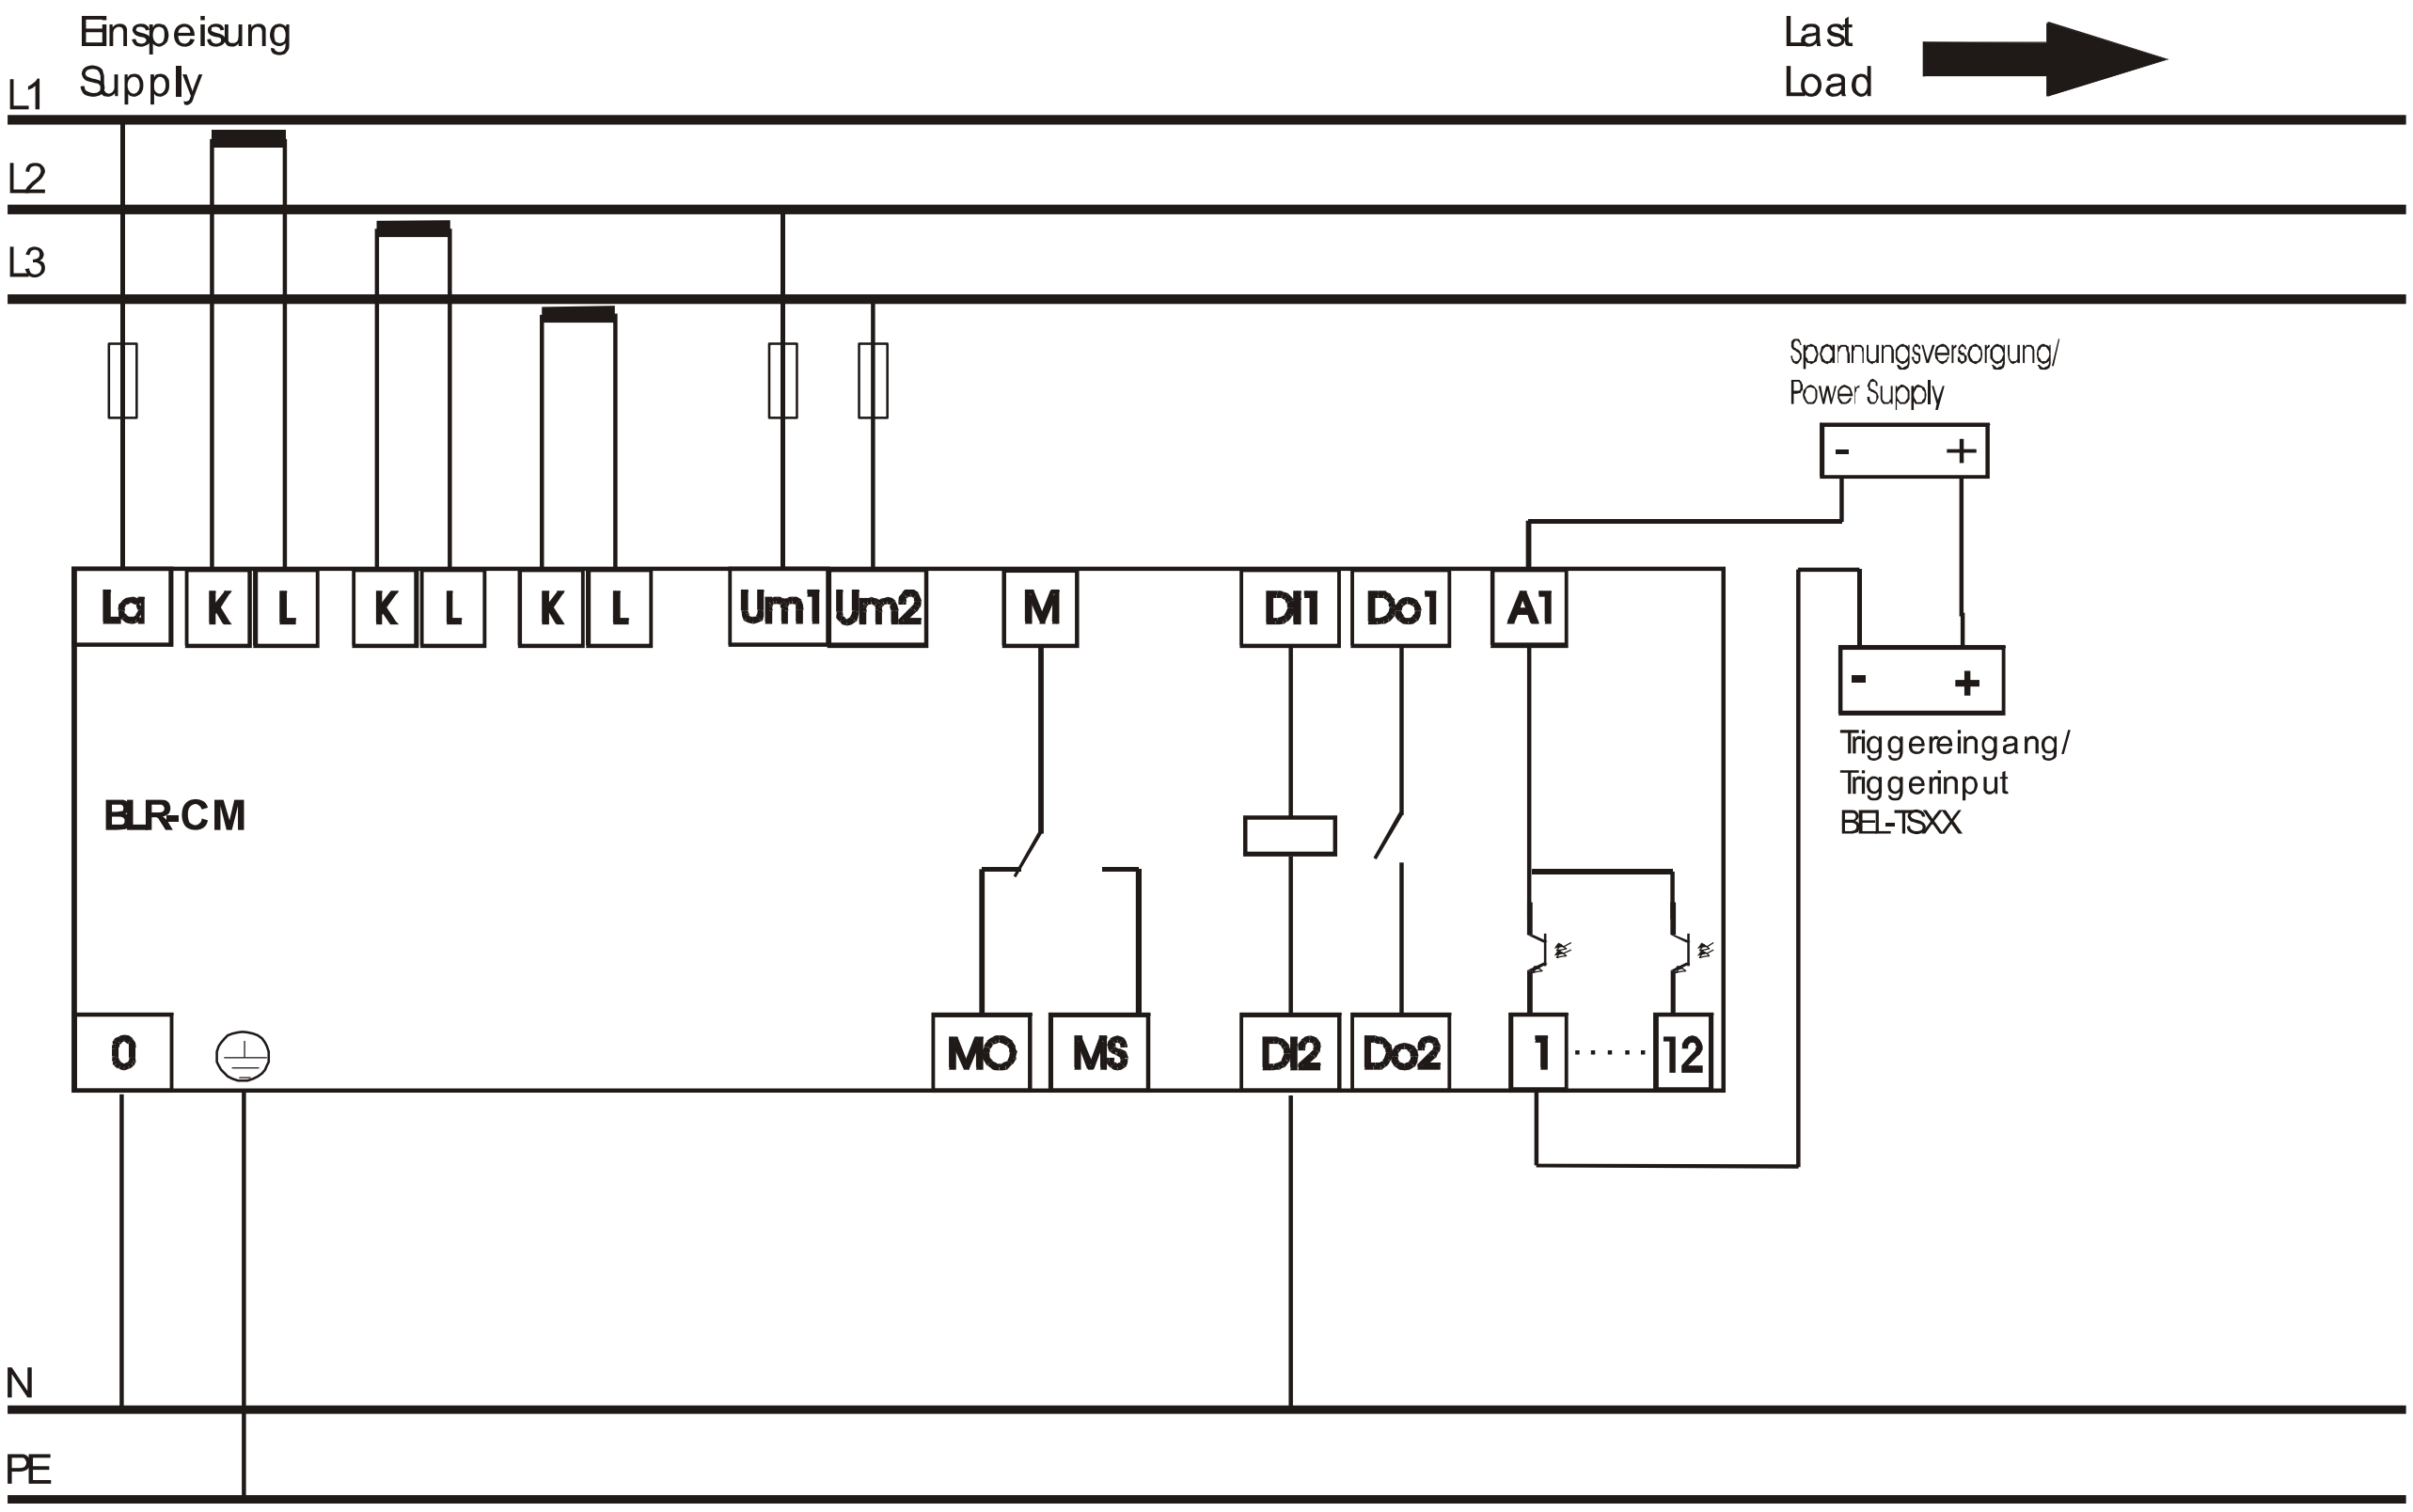

## 3.6 BLR-CM12RT-3A (BLR-CM*3phase*)

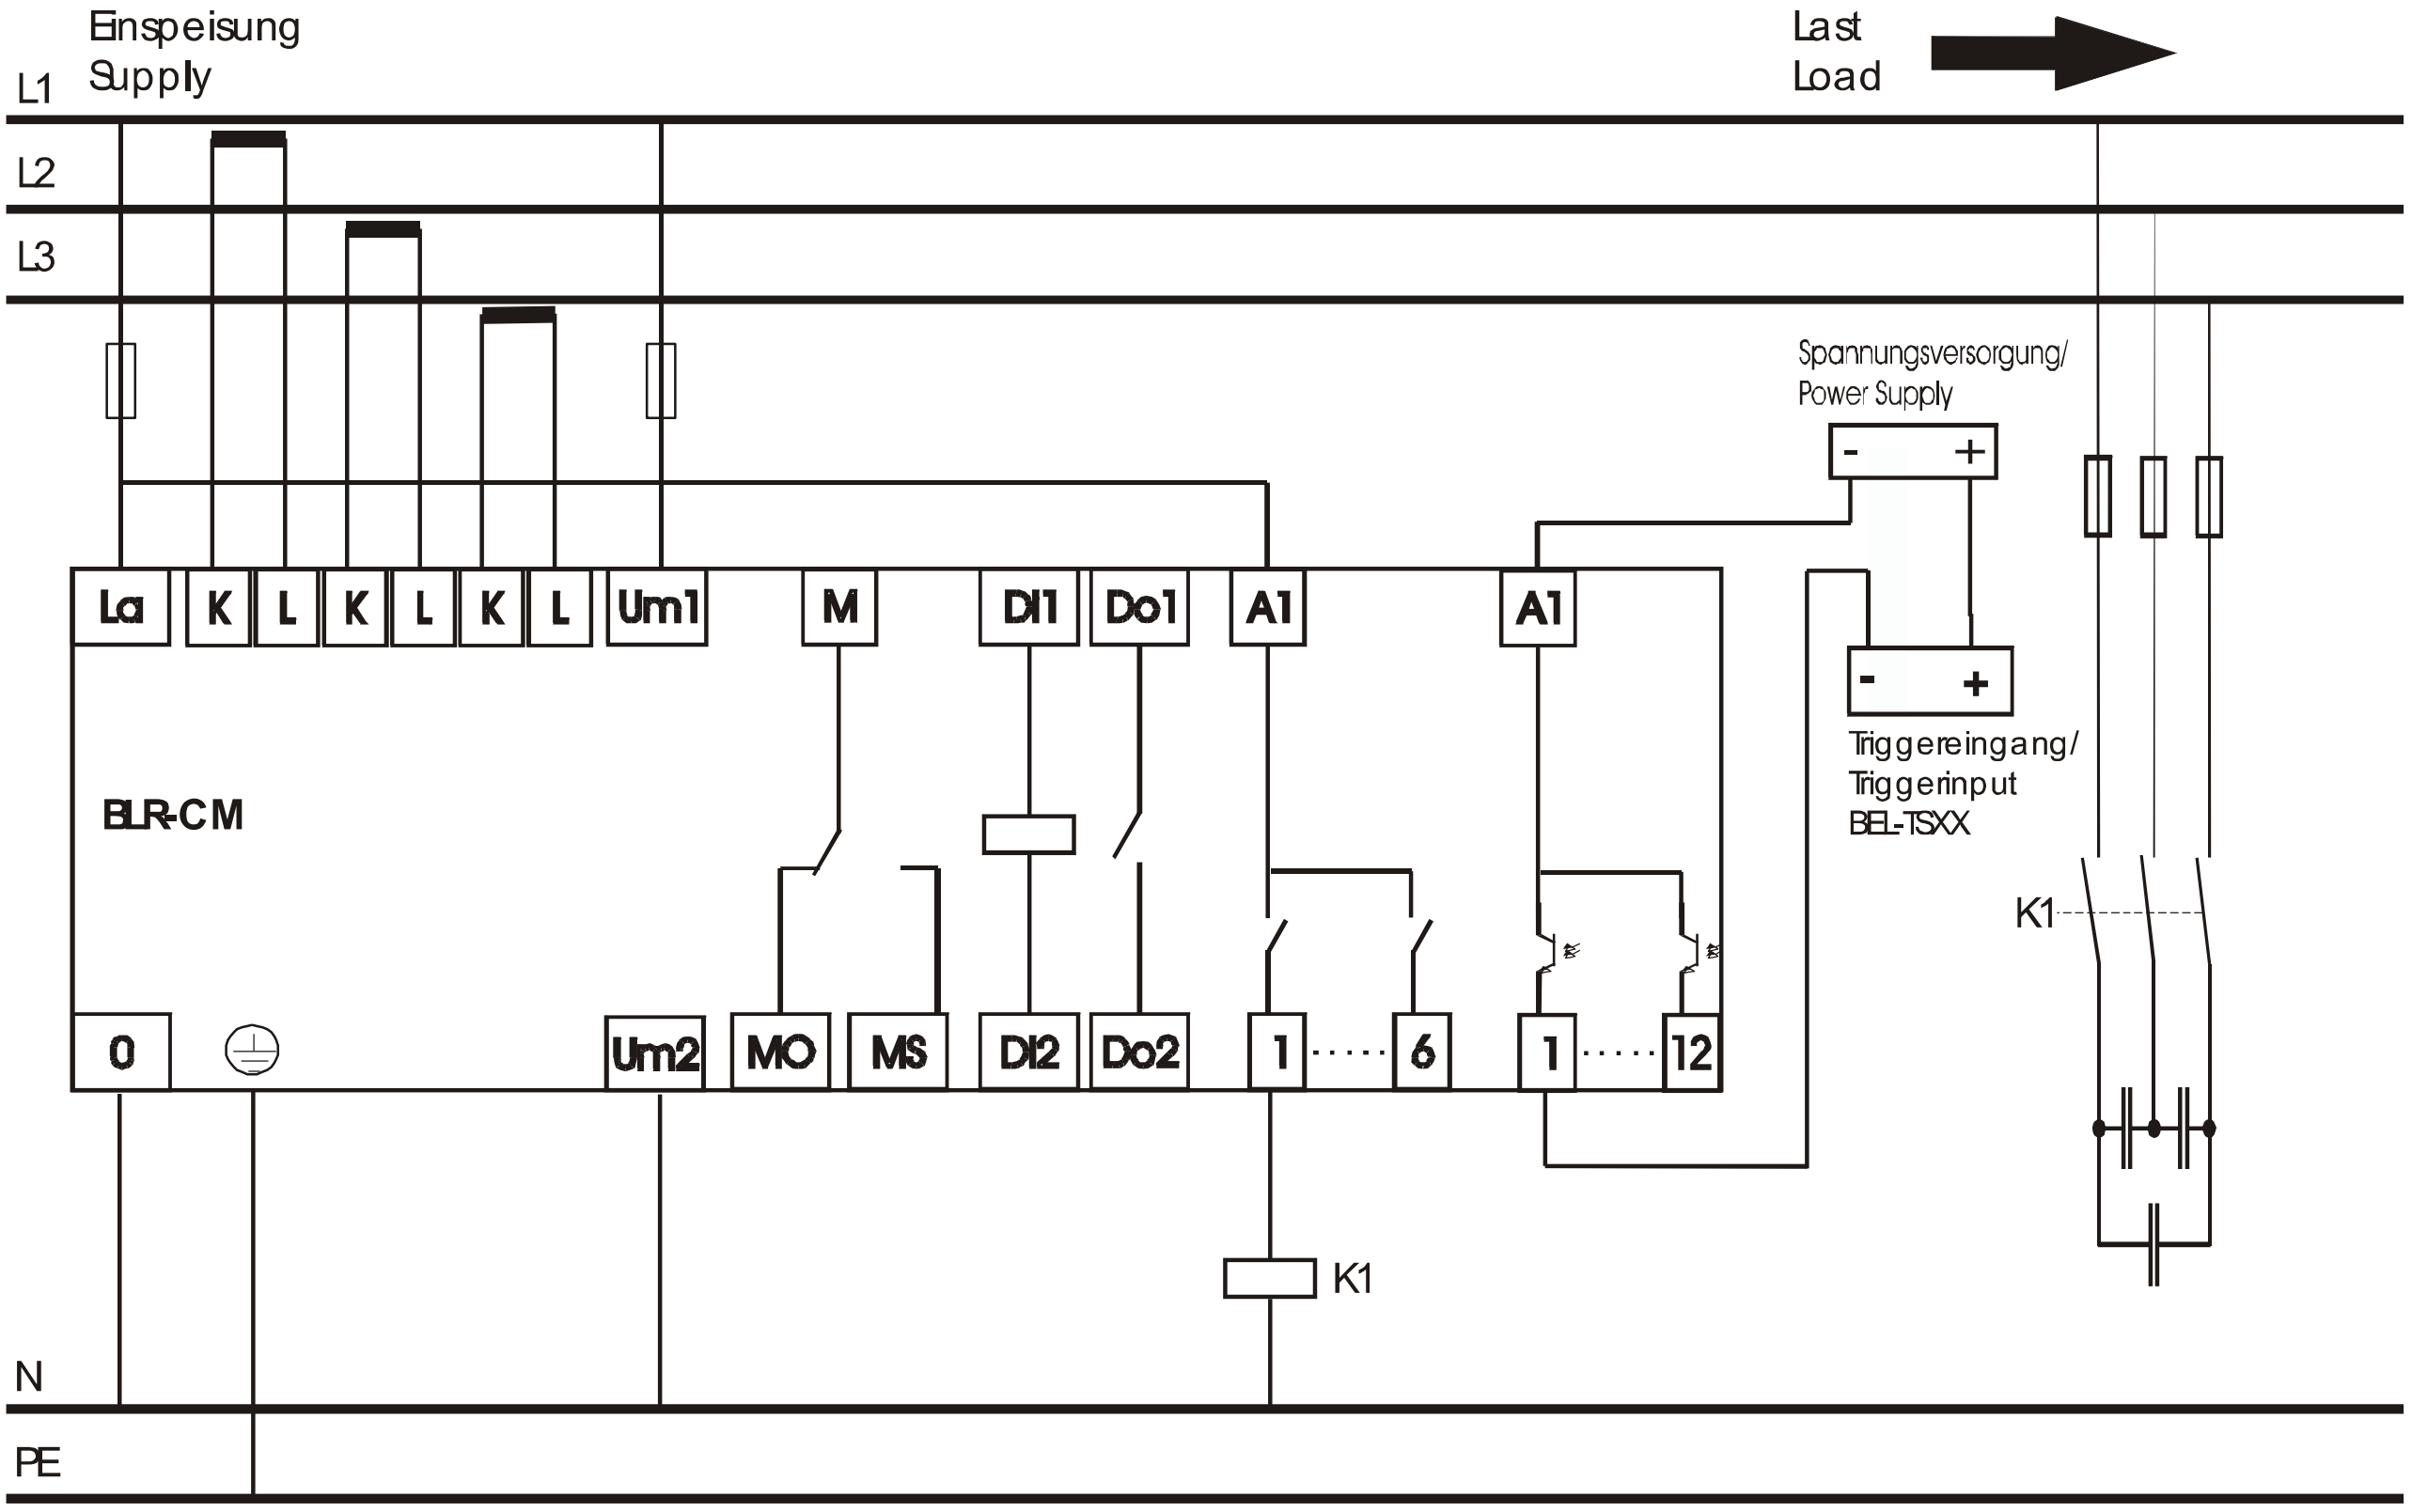


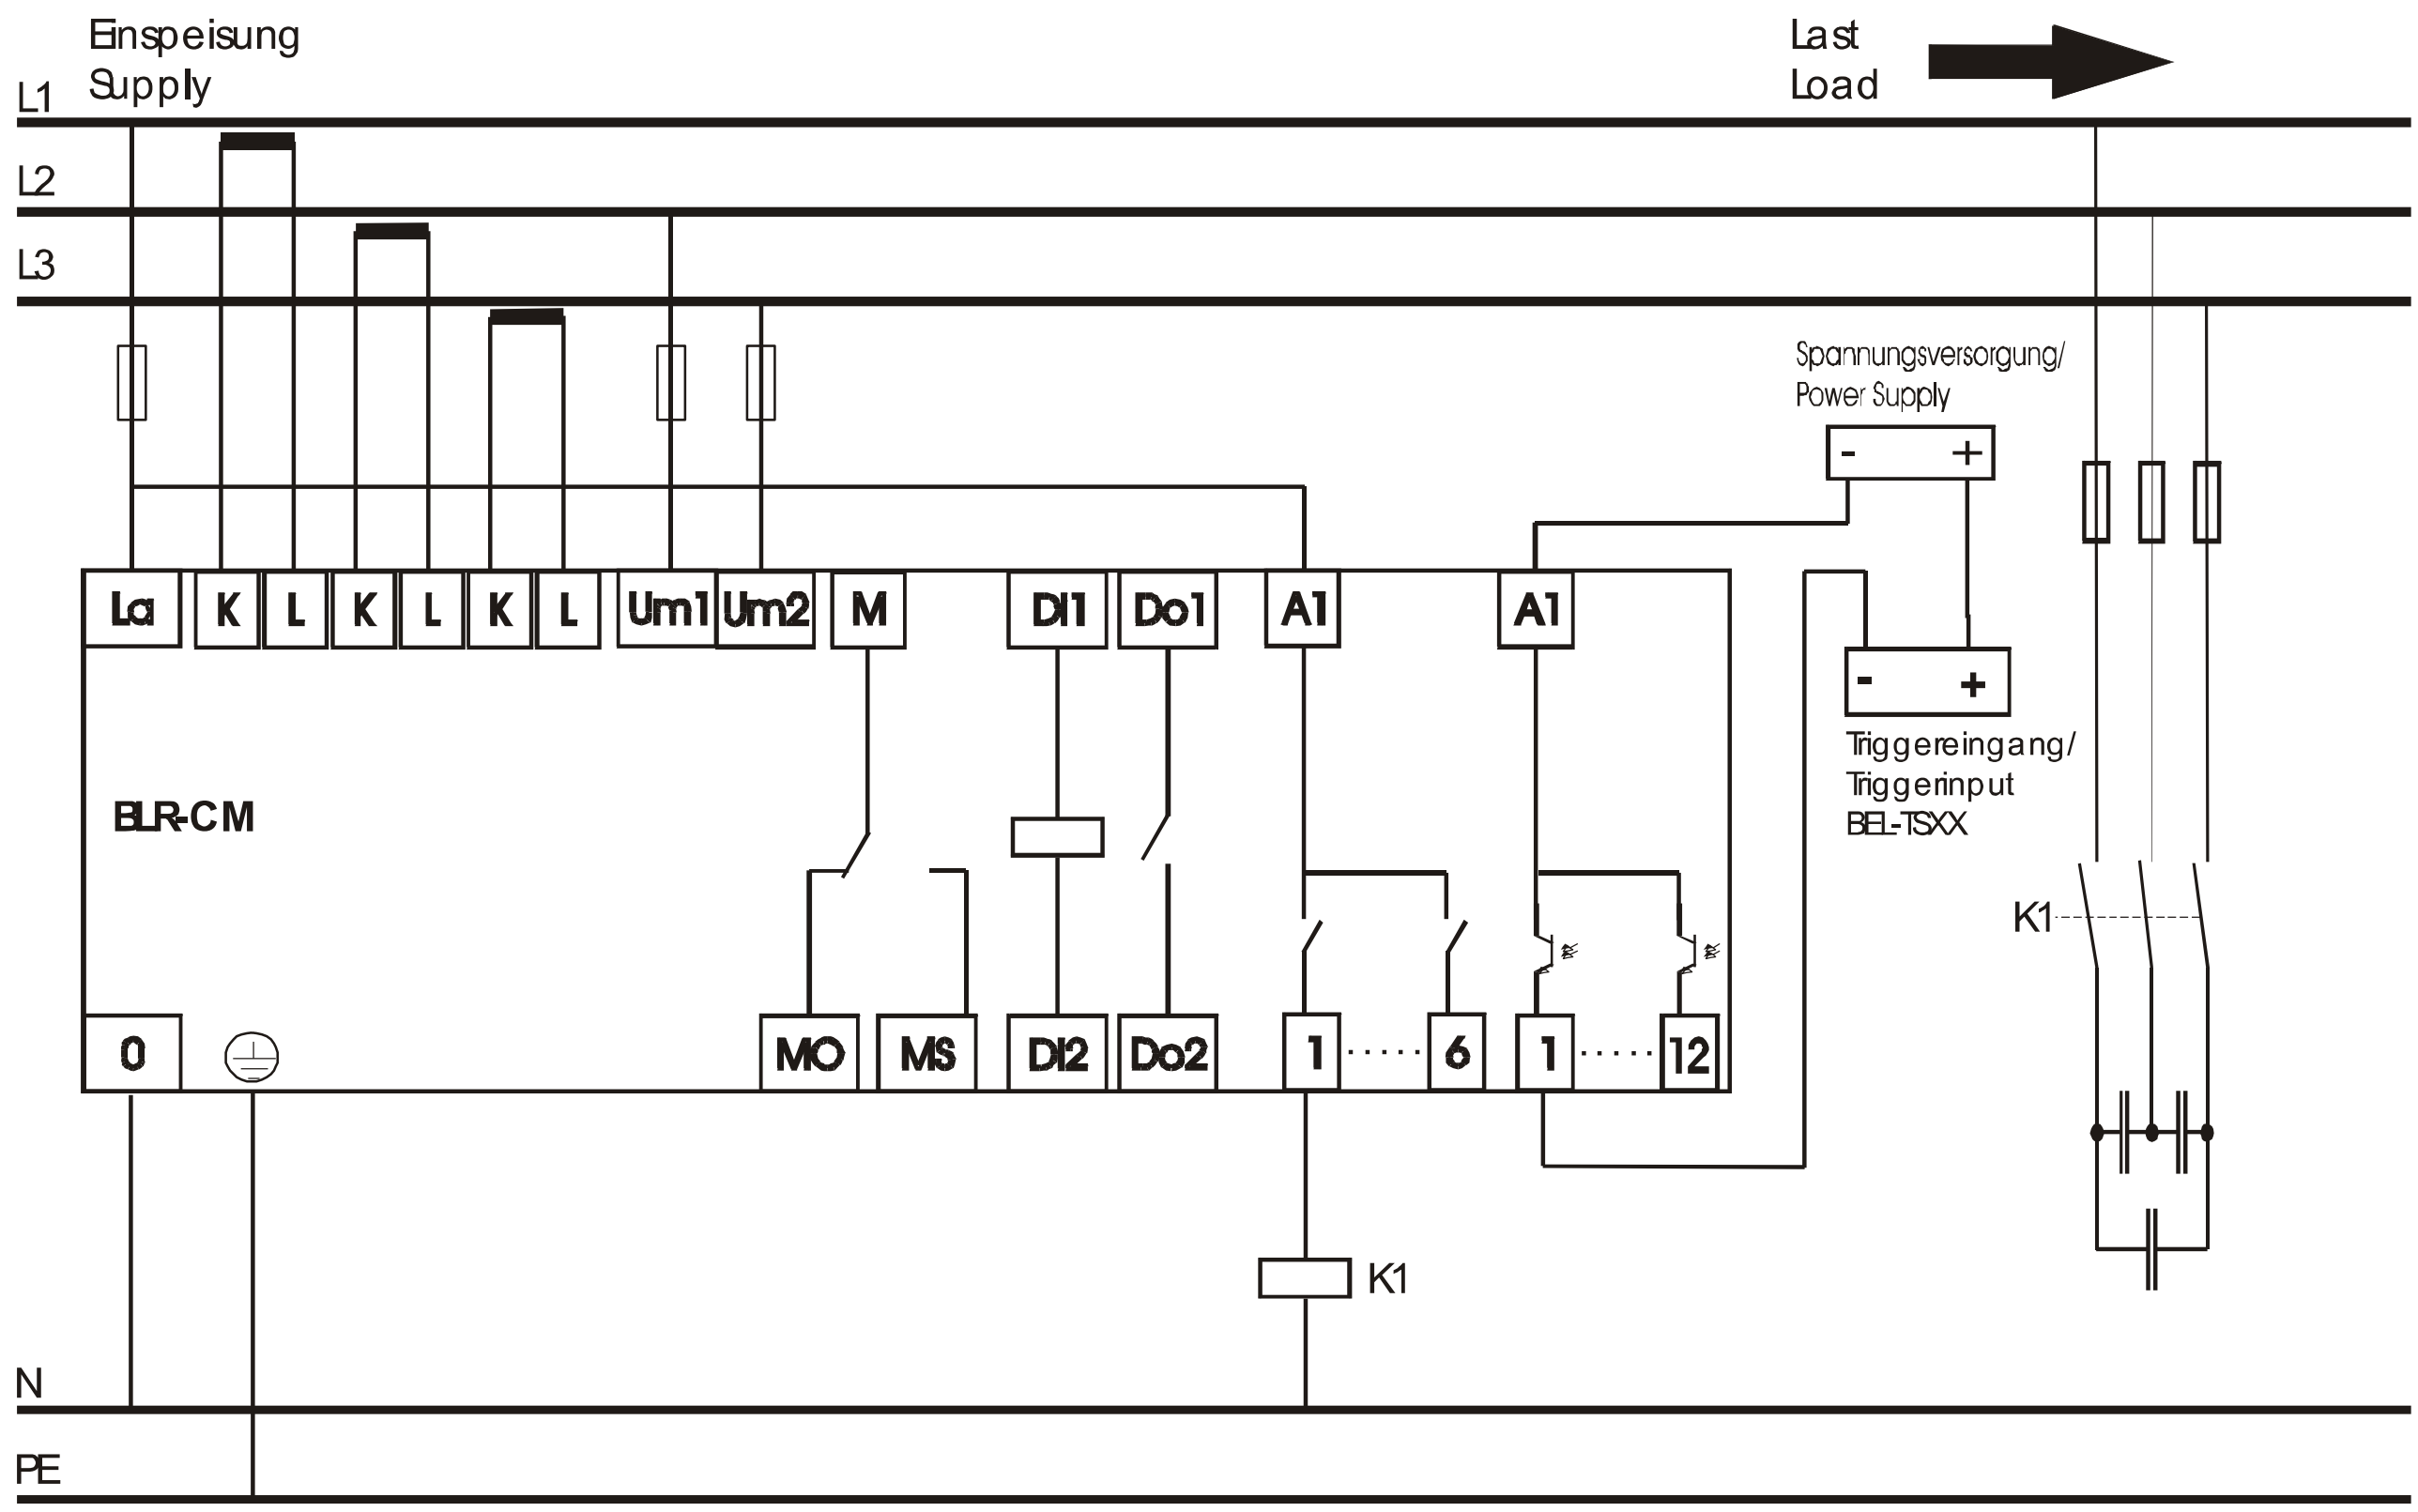

## 3.7 BLR-CM06/12R-HV

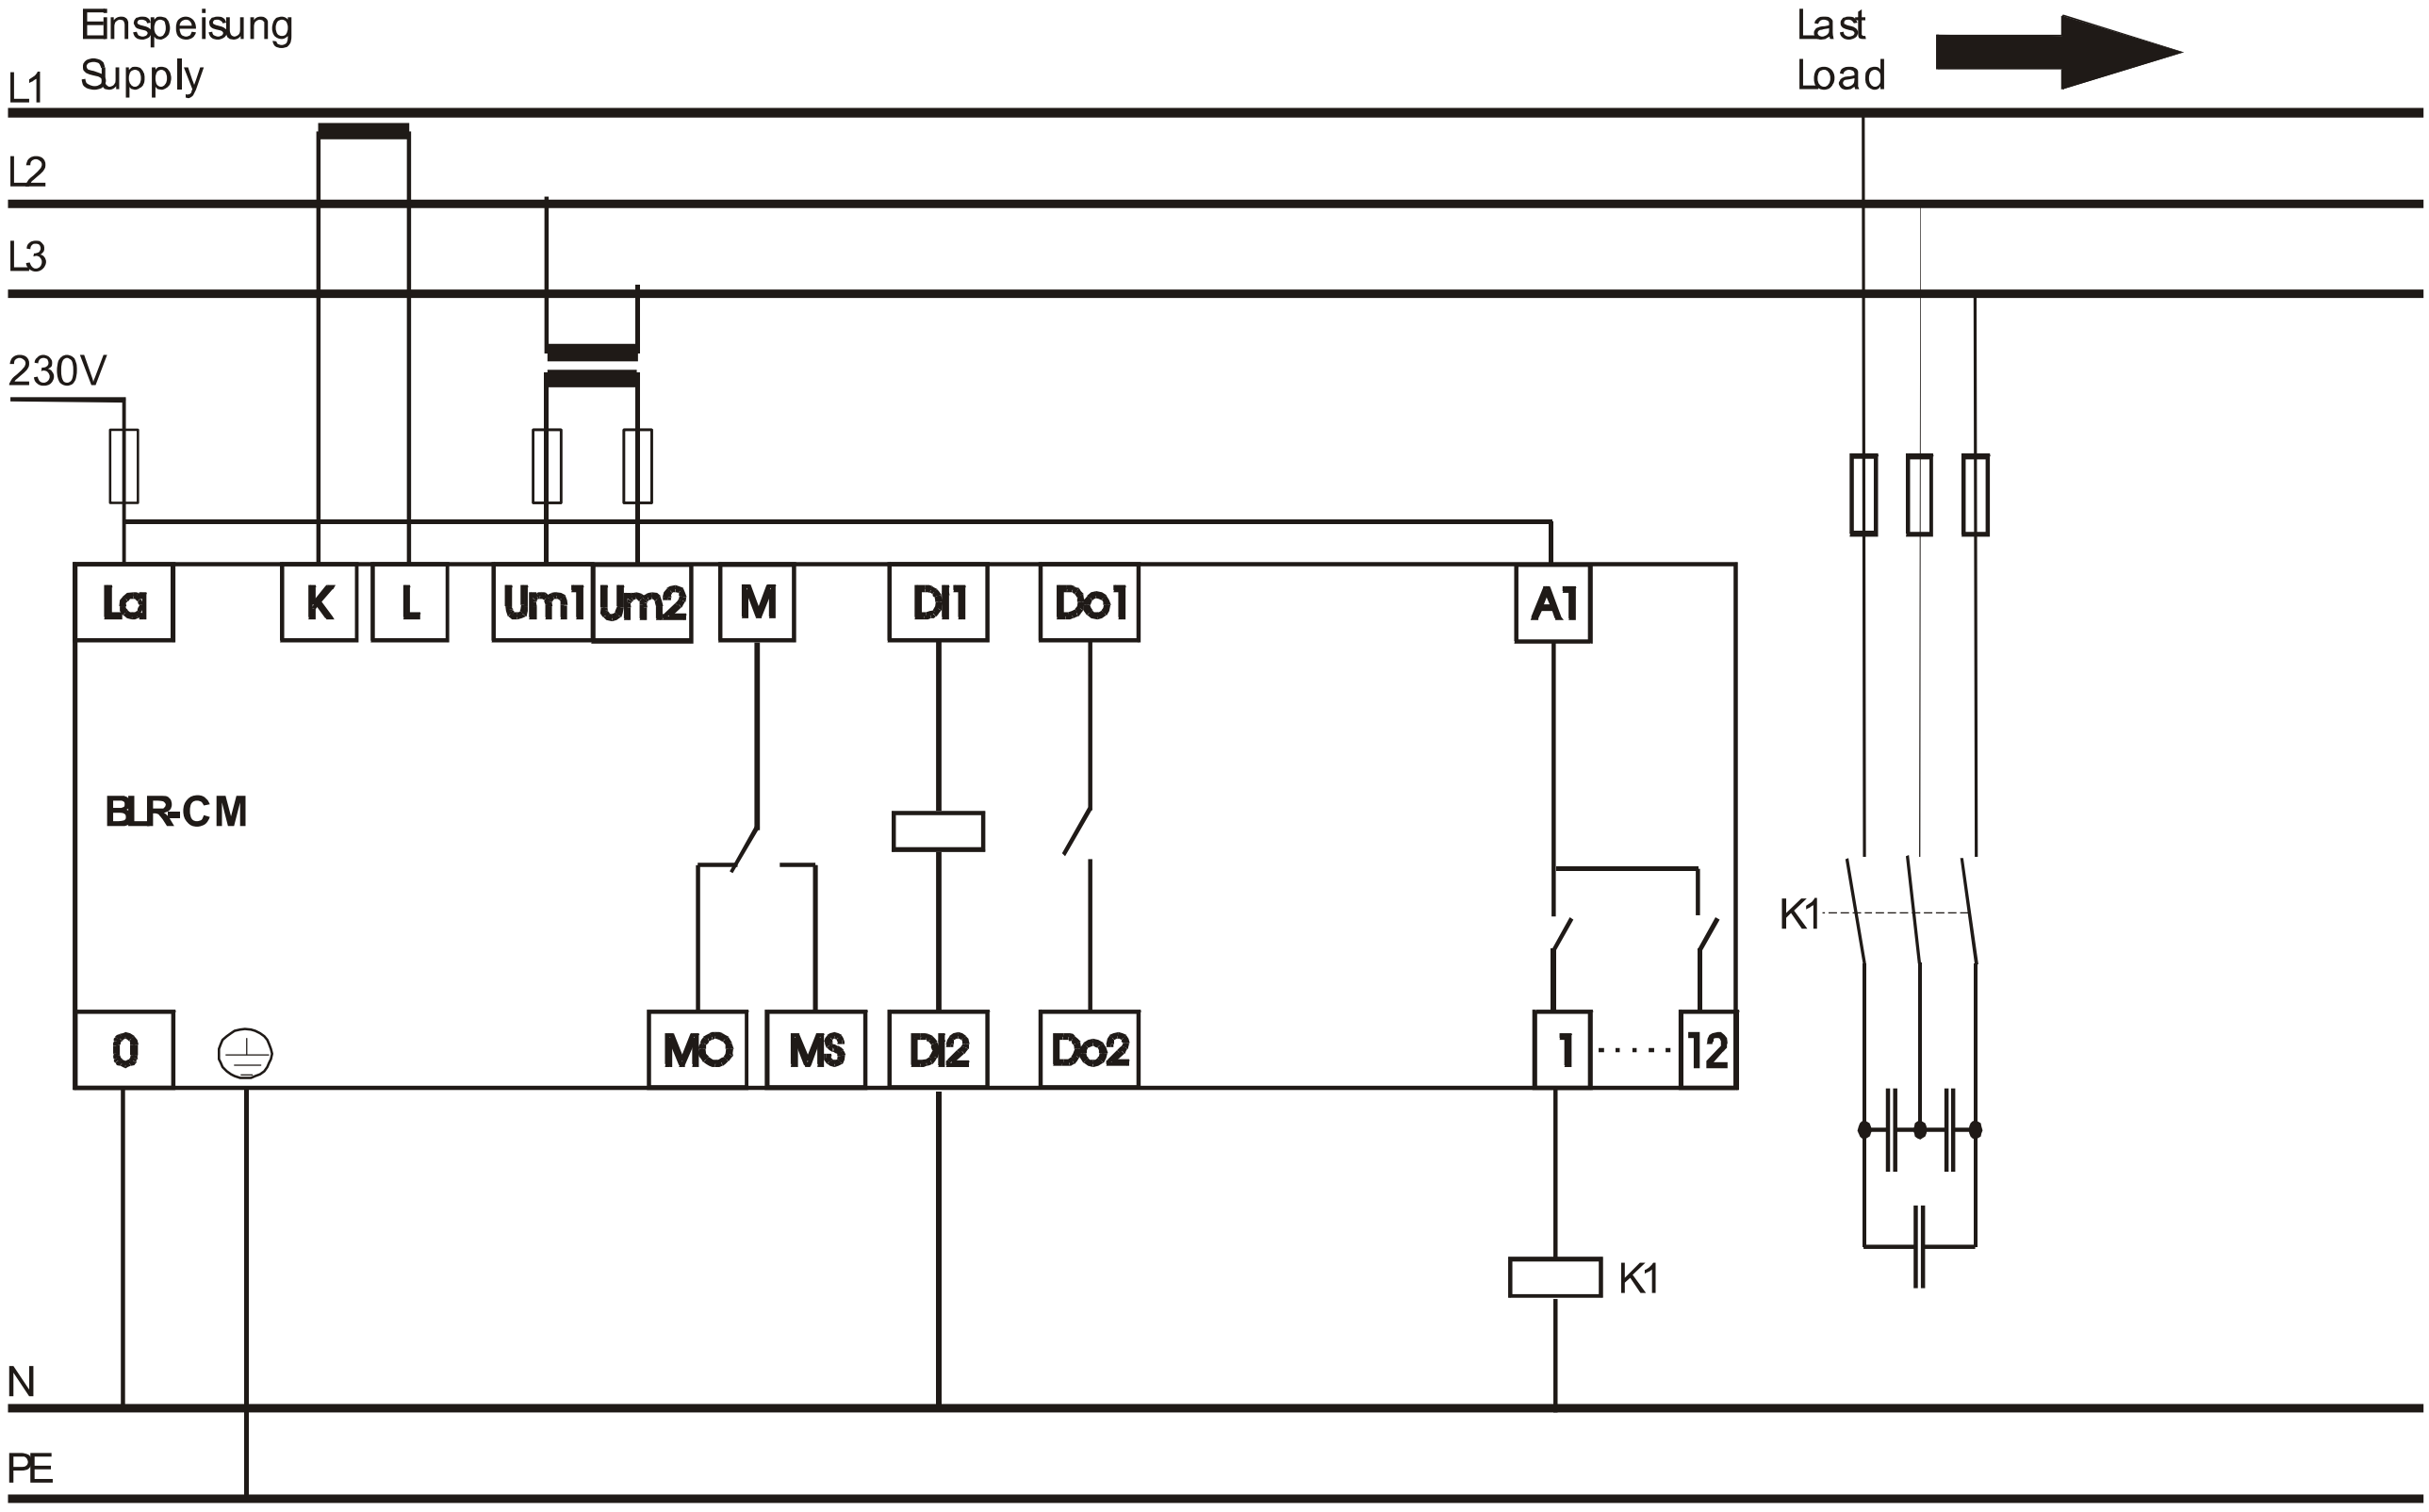


## 3.8 BLR-CM06/12R-3AHV (BLR-CM*3phase*)

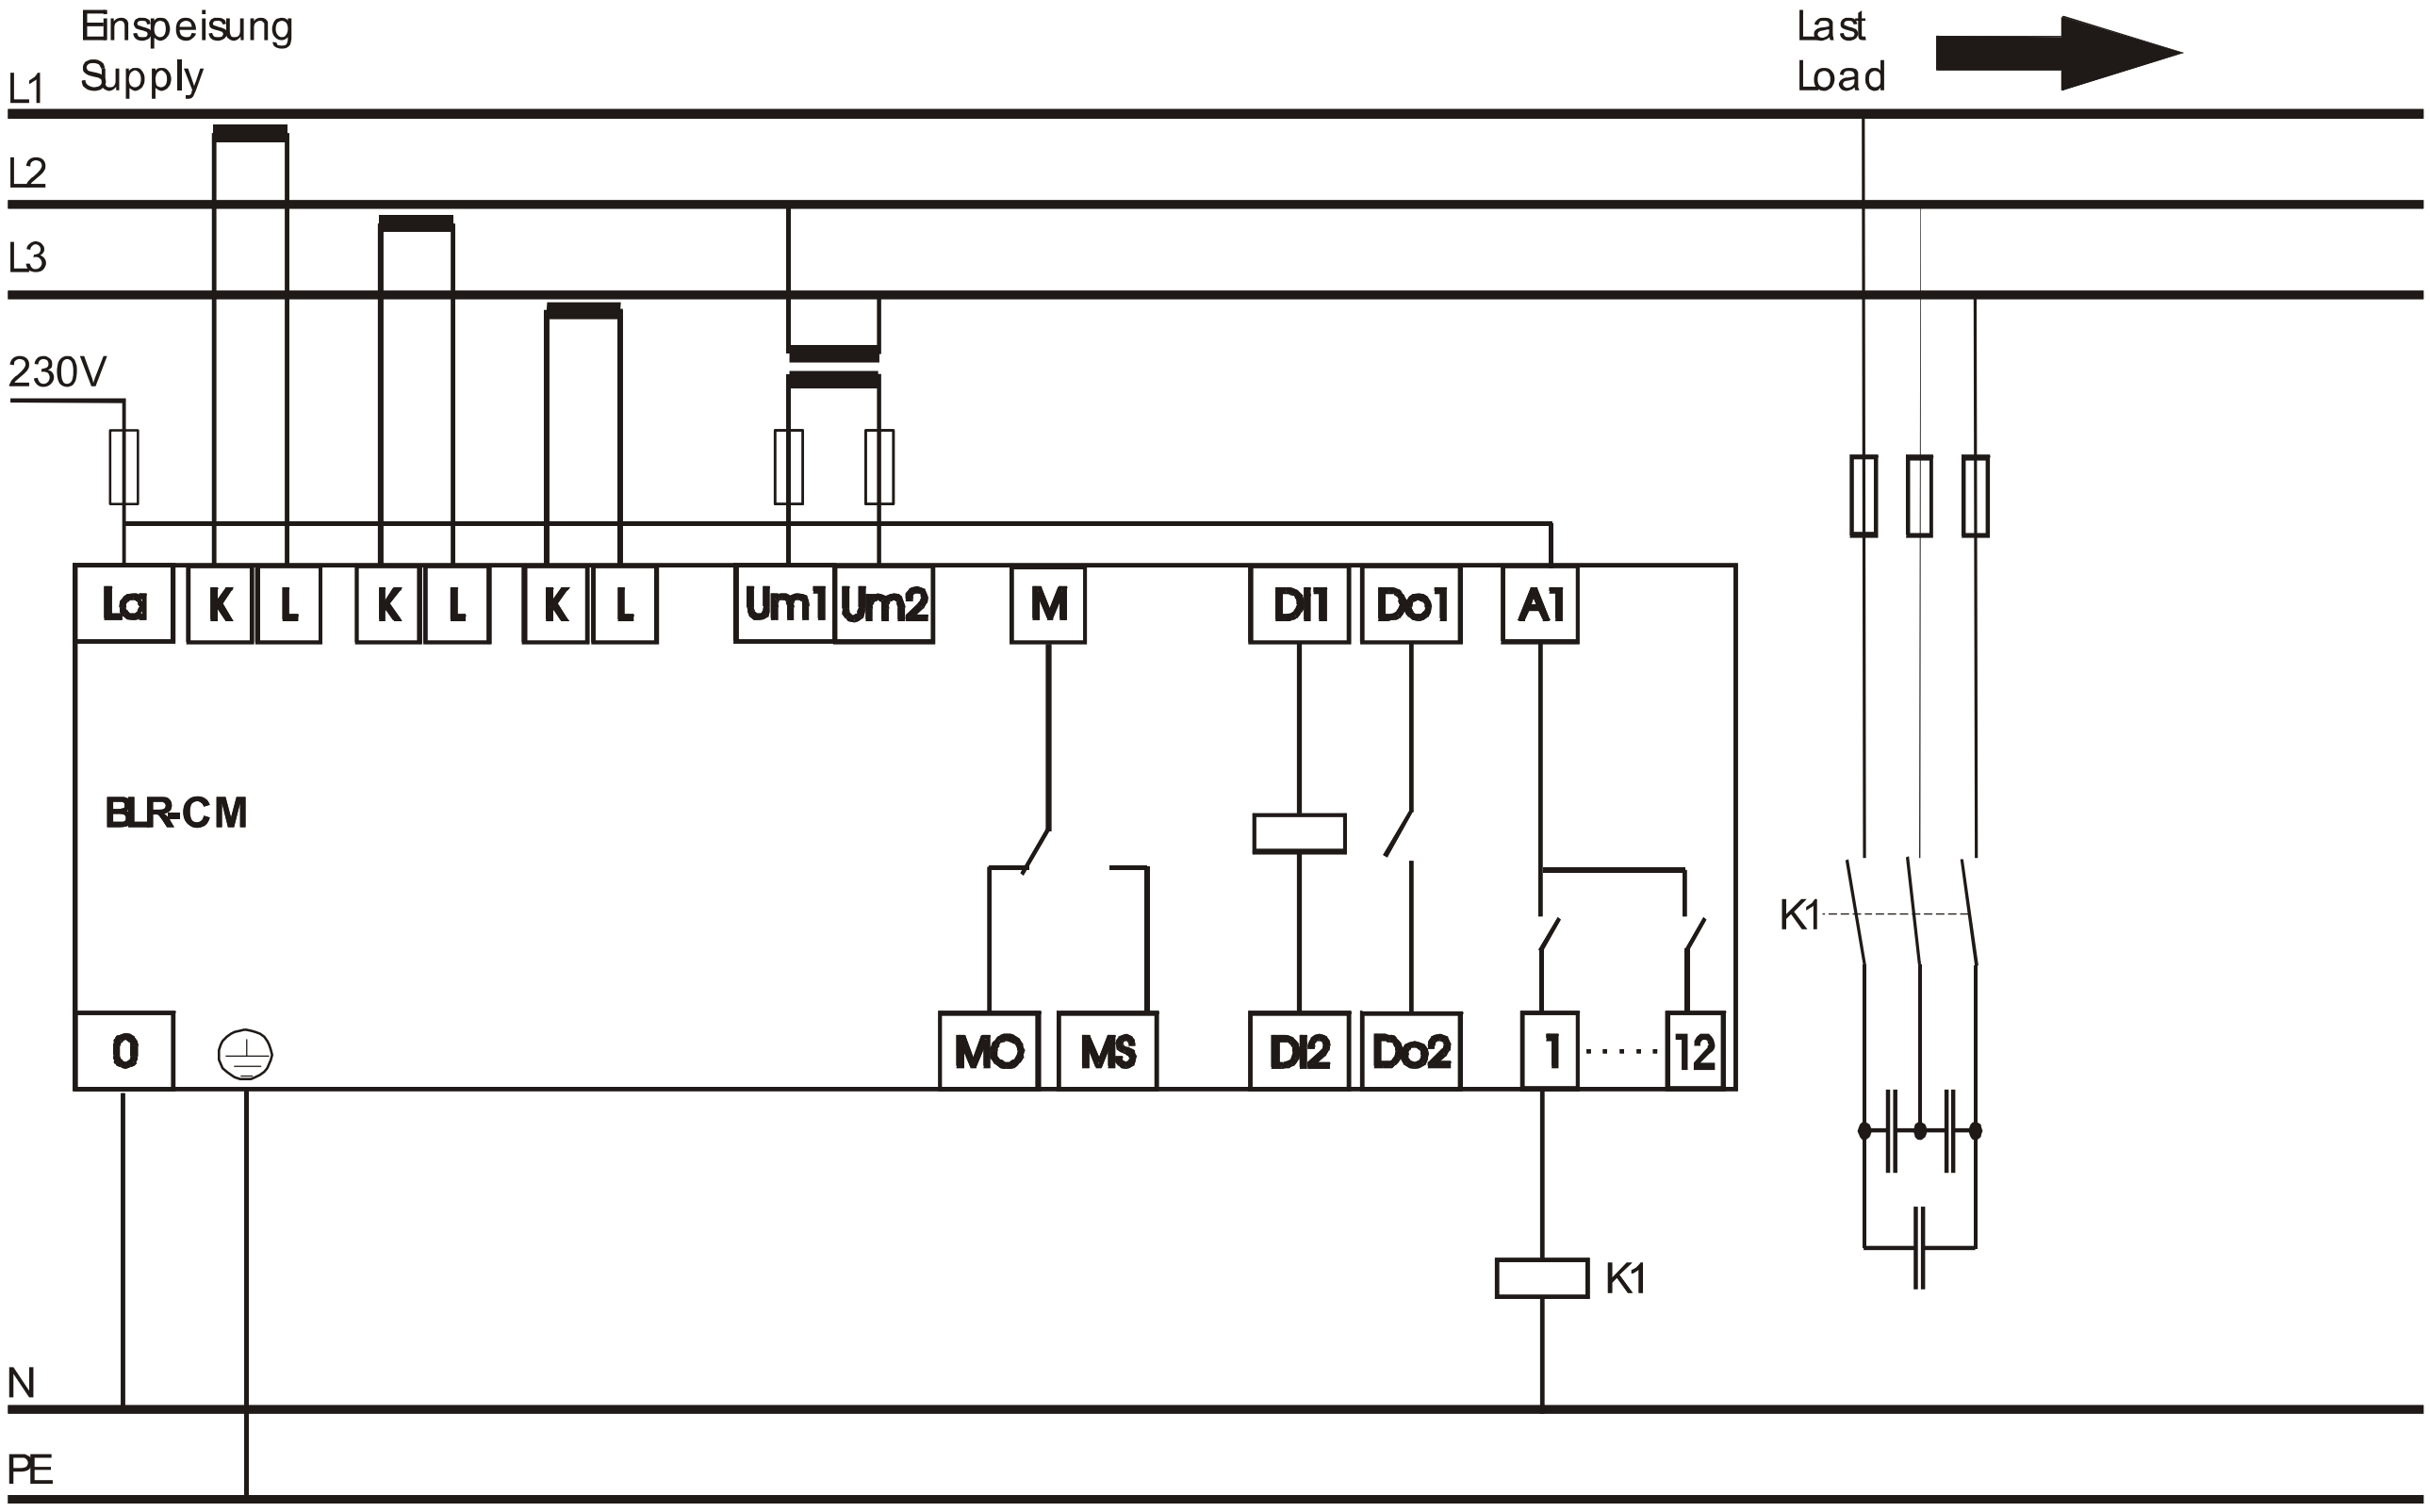

## 3.9 BLR-CM I/O

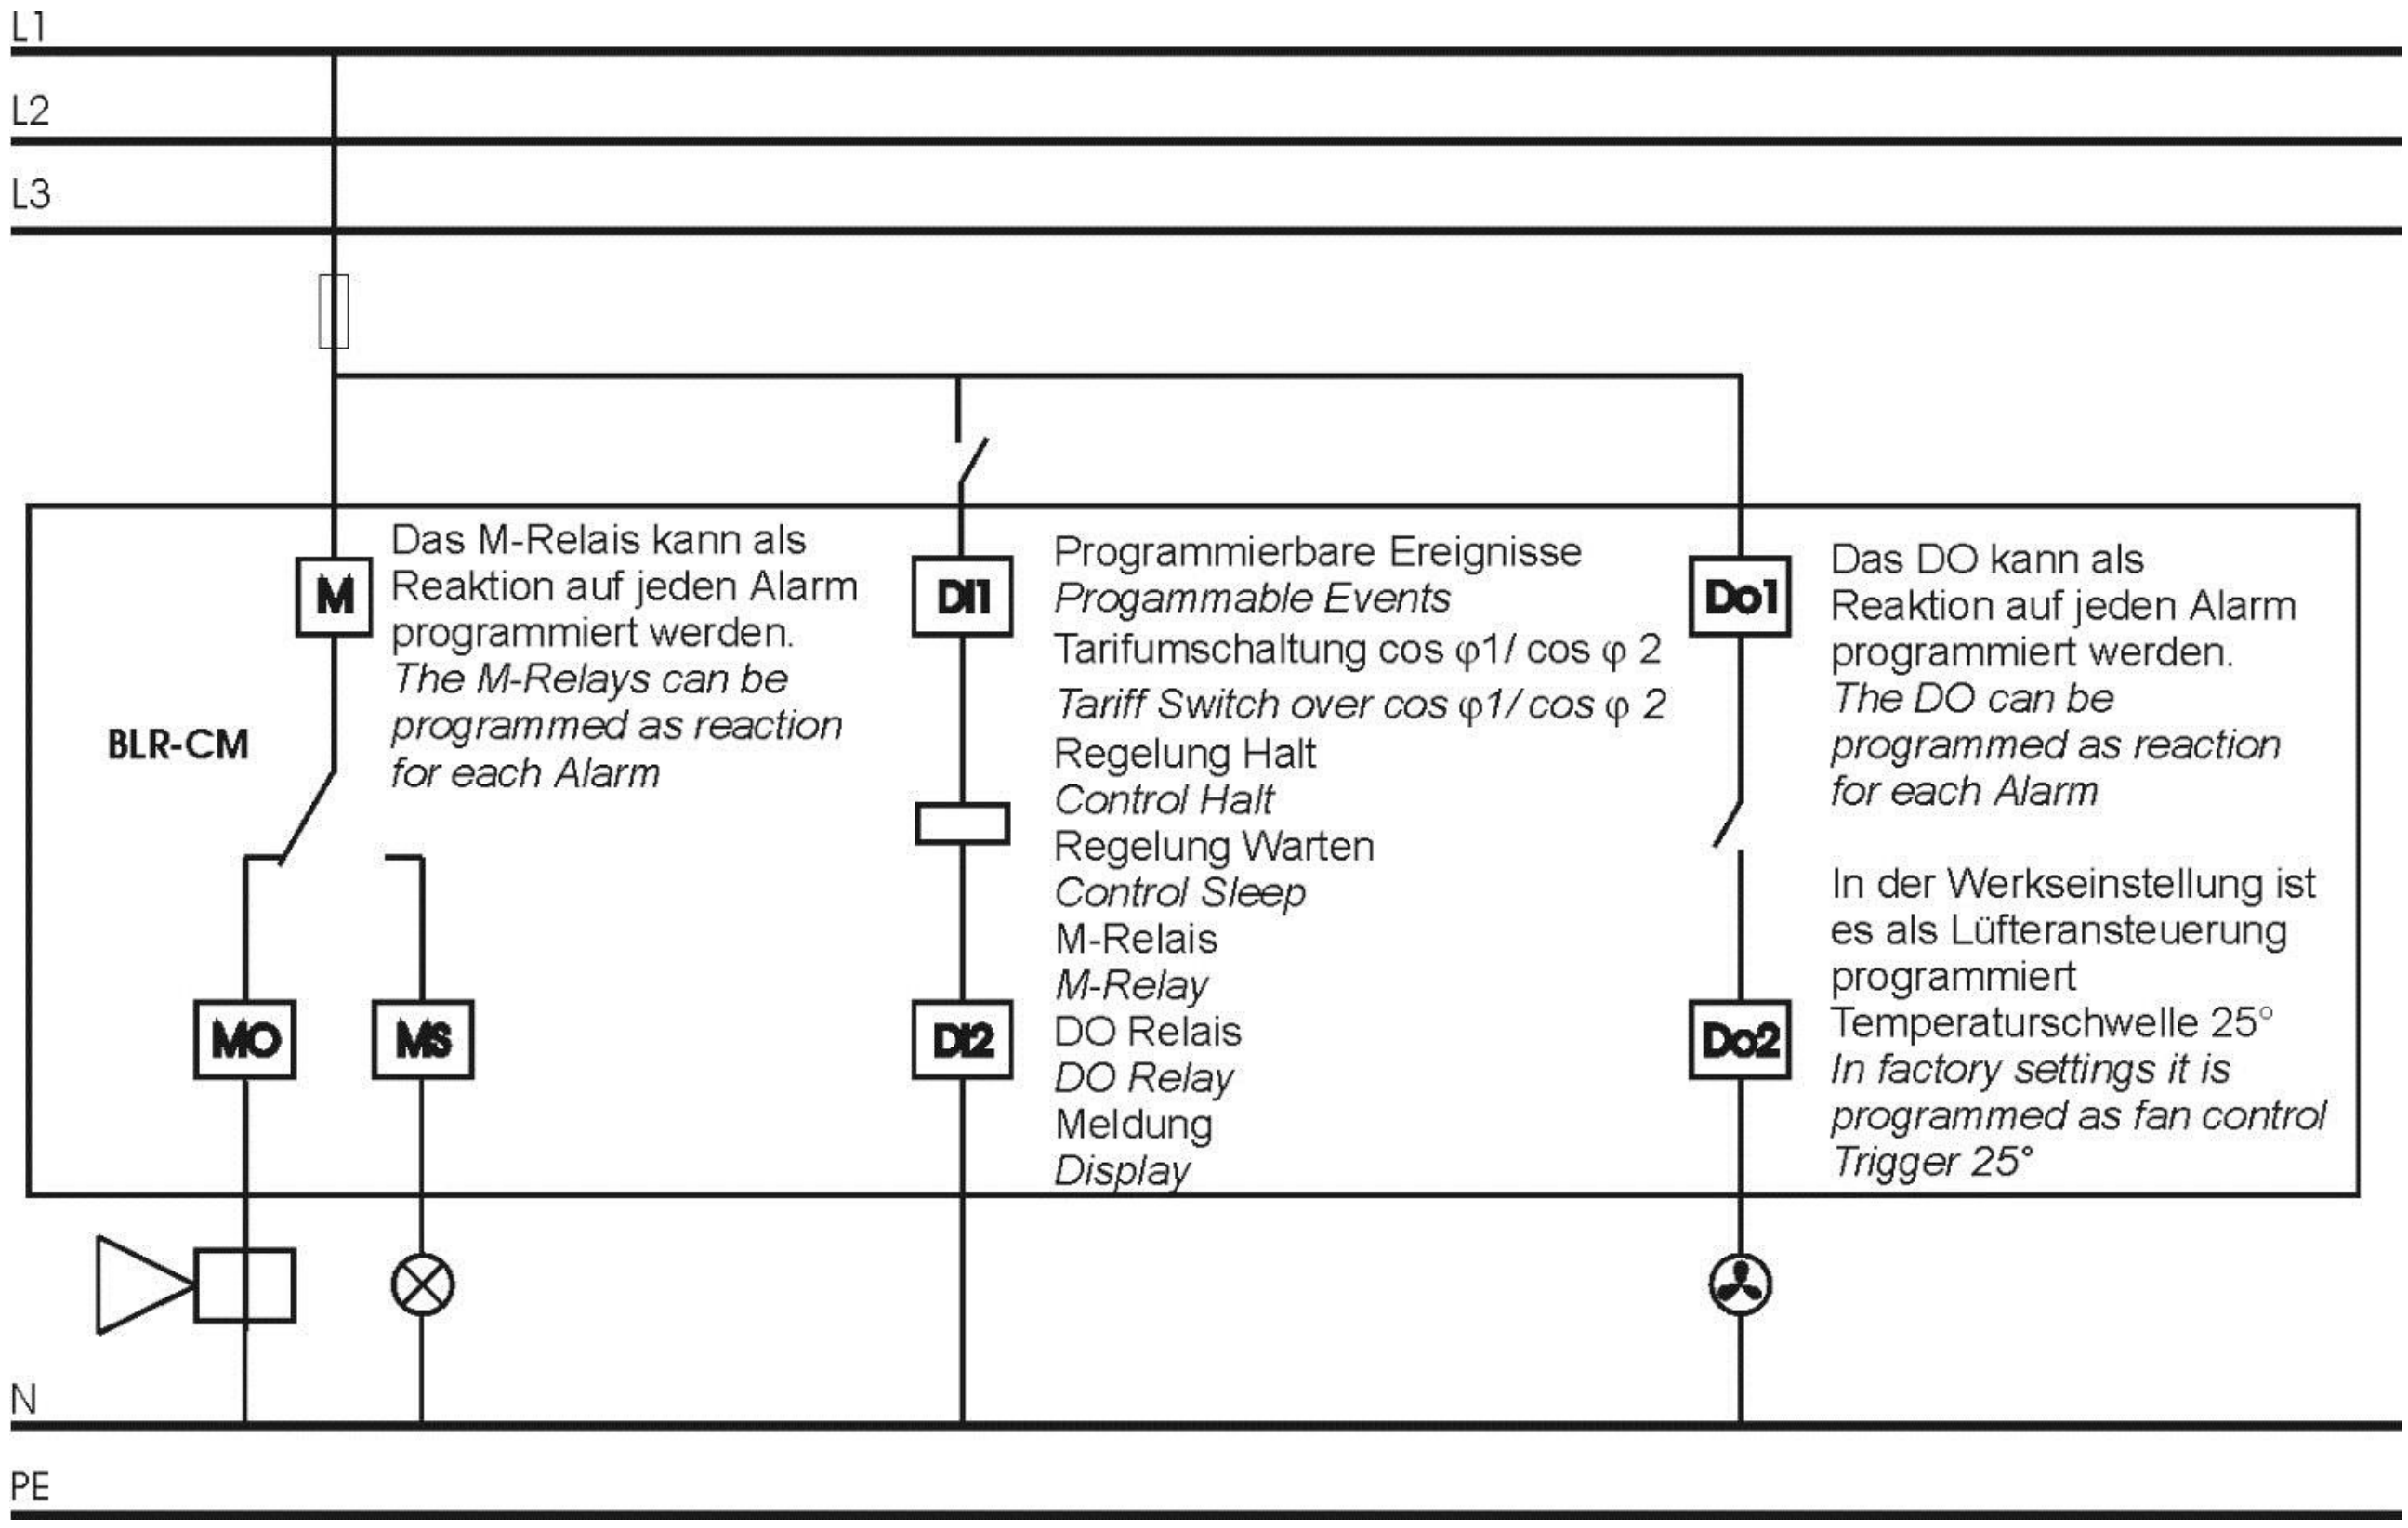


## 3.10 Synchronizing of datalogger